

INSTALLATION MANUAL



784EC Edgemont Craftsman Front Kit

with Backing Plates 799 (sold separately)

Use with Valor G4 780 and 785 models ONLY

DANGER



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

INSTALLER: Leave this manual with the appliance.



CONSUMER: Retain this manual for future reference.

Note: This kit must be installed or serviced by a qualified installer, service agency or gas supplier. These instructions are to be used in conjunction with the main installation instructions for the above listed heater model.

The 784EC Edgemont Craftsman Fronts are intended to be used on Valor heater model 780 and 785 with a required choice of Backing Plate: 3-Sided 799BPB-1, 799BPB-2, 799BPB-3, 799STB-1 or 4-Sided 799BPB-4S.

Mounting of the 784 affects cavity dimensions—see next page and installation manual supplied with the appliance for more information.


! Please note the appliance will have to be raised by 2-13/16" when using the 799BPB-4S 4-Sided Backing Plate as the plate extends below the bottom of appliance.

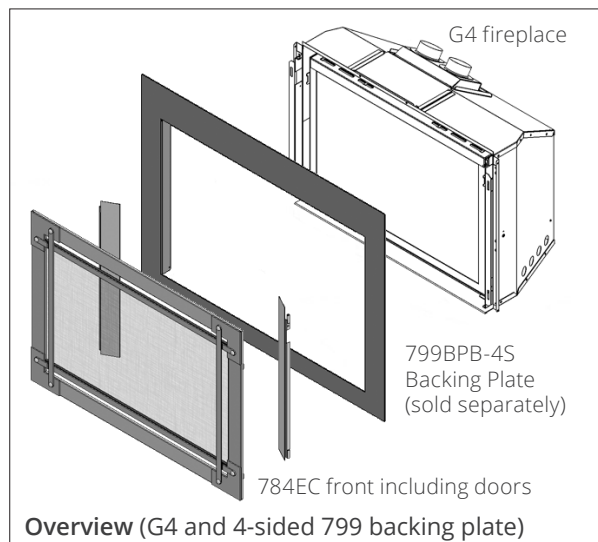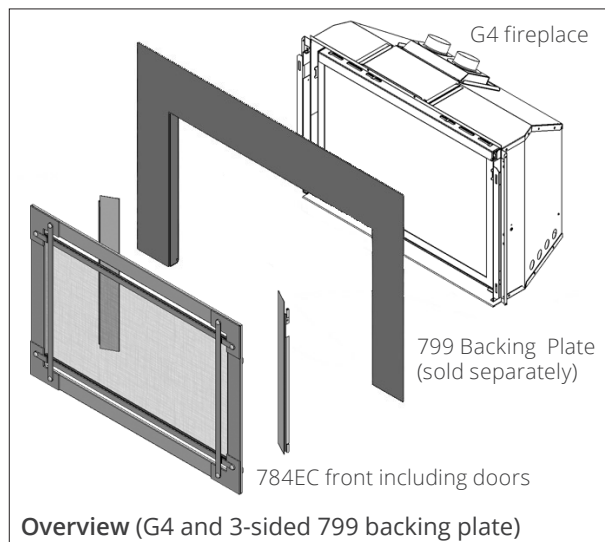

Dimensions


With 3-Sided Flat Backing Plates

Minimum Cavity Dimensions for 784EC with 799BPB
inches [mm]

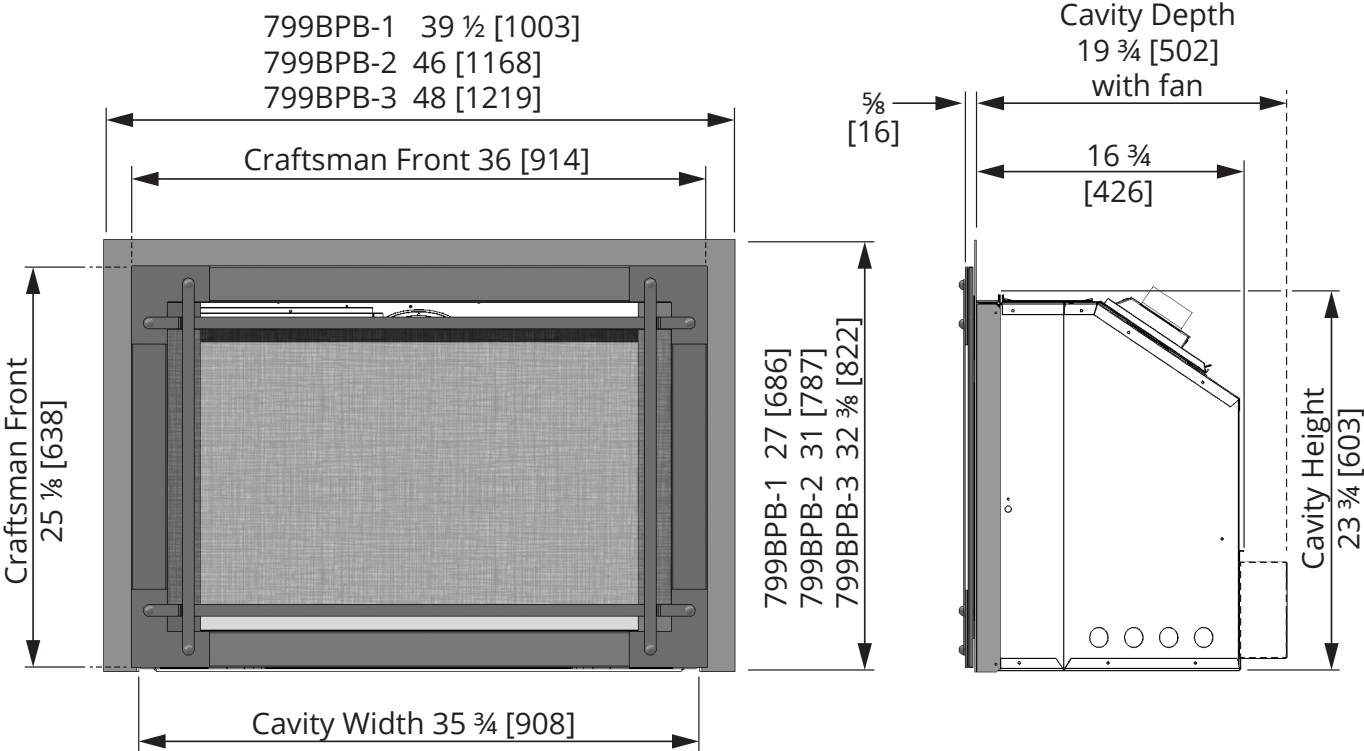

With 3-Sided Square Backing Plate


Minimum Cavity Dimensions for 784EC with 799STB
inches [mm]

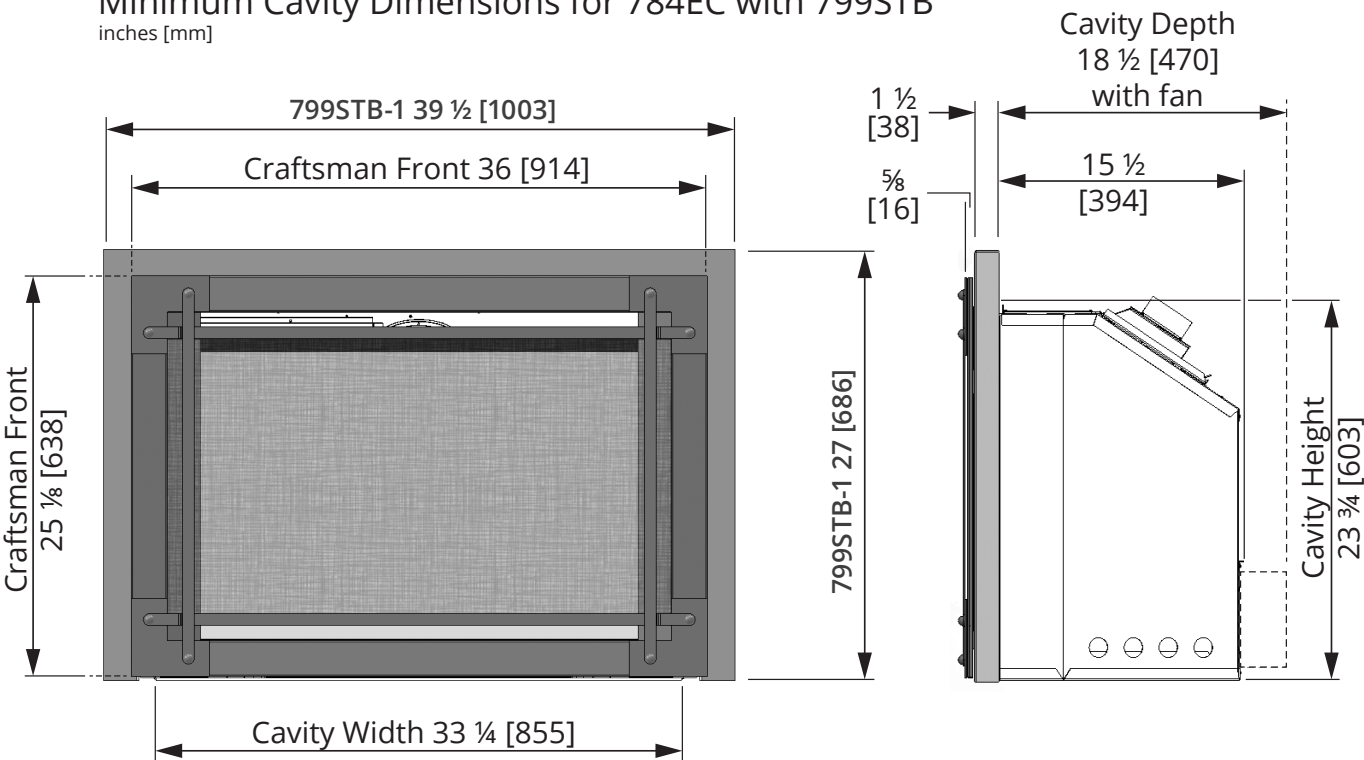

With 4-Sided Flat Backing Plate

Minimum Cavity Dimensions for 784EC with 799BPB 4-sided

inches [mm]

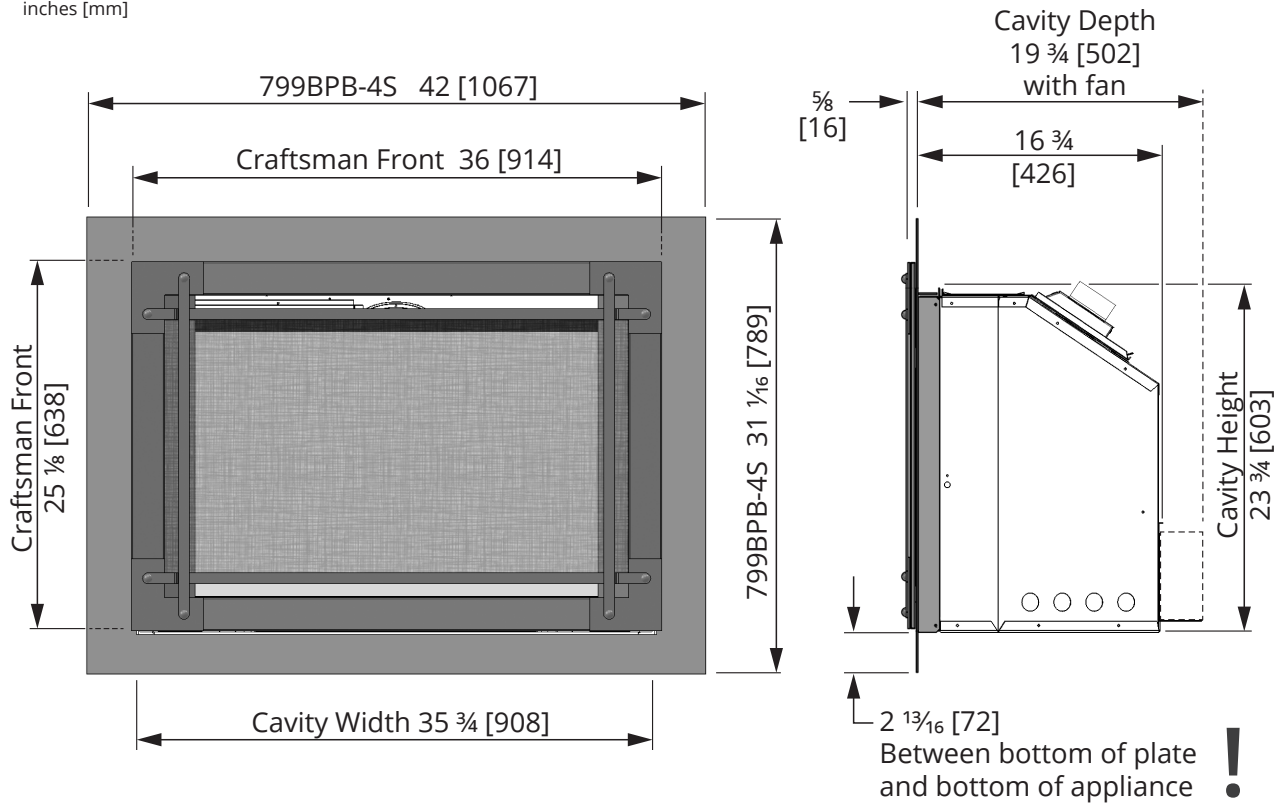


Installation

1. Secure the backing plate to the appliance's outer case from the inside as indicated (2 screws per side).


Note: You may need to remove the side shrouds to secure the plate.

Note: The 3-sided and 4-sided backing plates install the same way.

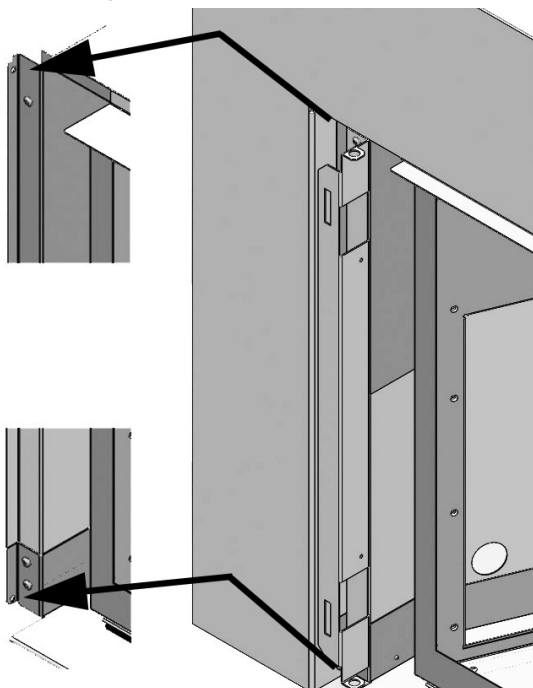


2. Identify the left and right door panels and their top and bottom using the image below. On the left panel, the notch in the rear flange of the panel is at the top. The space between the rear flange and the edge of the panel is wider at the top than at the bottom of the panel as shown below.

Left door panel

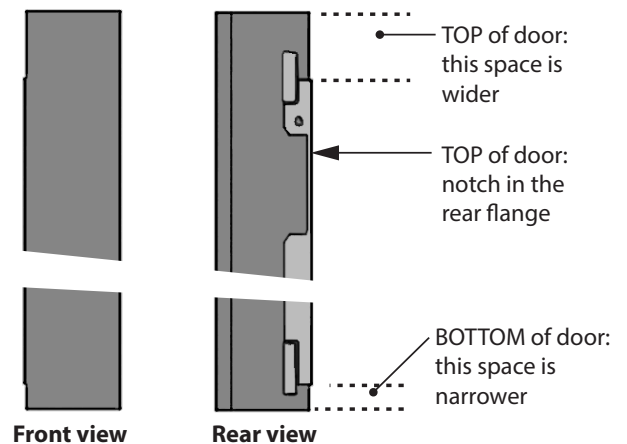


3. Insert the top pin of the left door panel in the hole at the top of the left shroud already installed on the appliance.
4. Lift the panel as far as possible and insert the bottom pin in the hole at the bottom of the shroud. The panel should rotate freely.

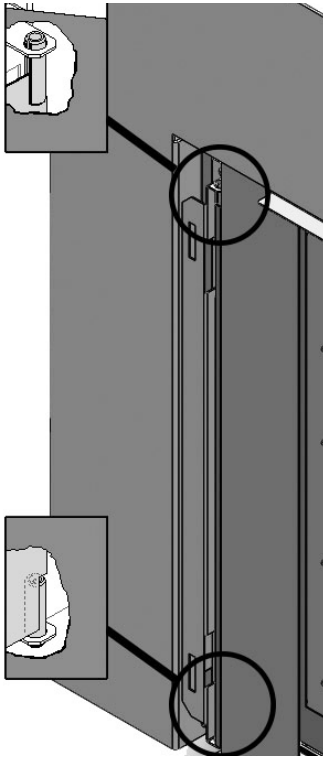

5. Install the right door panel the same way.
6. Hook the barrier screen front to the backing plate as indicated.

Note: The barrier screen front, when hooked to the backing plate, protrudes slightly in front of the plate.

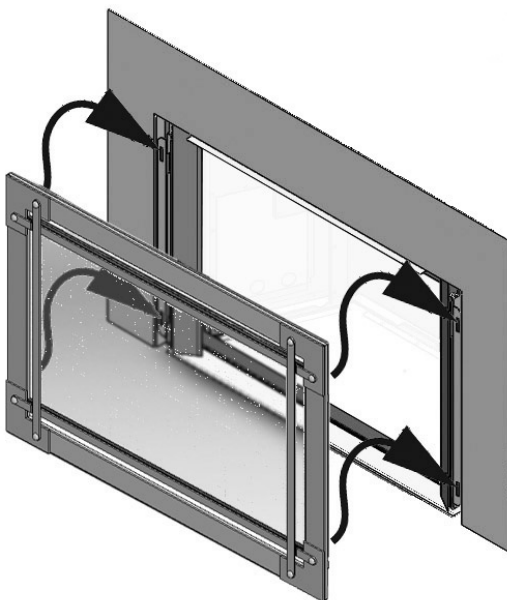

Maintenance

To clean the backing plate, use mild soap and water. You can dust the screen with a soft brush. To brush the back of the screen, simply unhook it.

If the barrier becomes damaged, the barrier shall be replaced with the manufacturer's barrier for this appliance.

To clean the window and ceramics inside the firebox, consult the *Homeowner's Manual* supplied with the fireplace.




WARNING

DO NOT TOUCH the barrier screen, front or glass while they are hot! Let the fireplace cool first before cleaning it.

FOR YOUR SAFETY, ensure the barrier screen is reinstalled on the fireplace after maintenance.


Repair Parts List

	Description	Part Numbers				
	Backing Plates	799BPB-1 39-1/2" x 27"	799BPB-2 46" x 31"	799BPB-3 48" x 32-3/8"	799BPB-4S 42" x 31-1/16"	799STB-1 39-1/2" x 27"
1	3-Sided	4005420AZ	4004446AZ	4006310AZ		
2	4-Sided				4008669AZ	
3	3-Sided Square					4010748

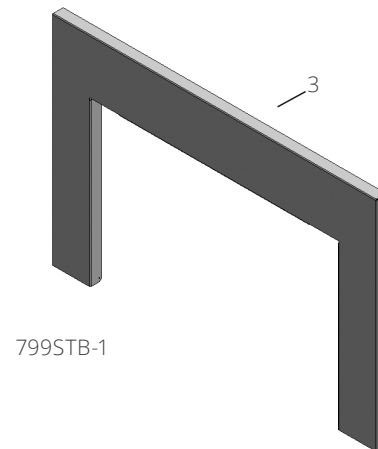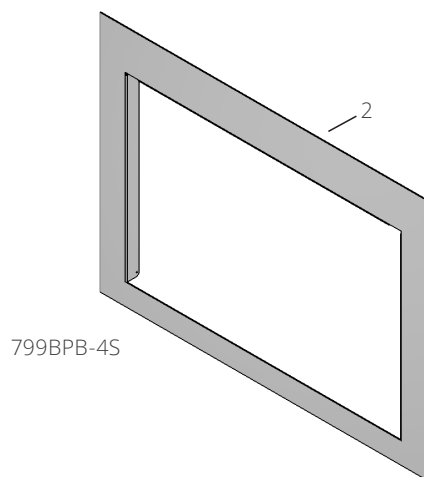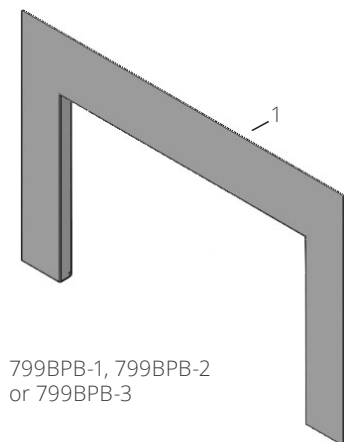

Repair Parts List

	Description	Part Numbers	
		784ECB Black	784ECPW Pewter
1	LH door panel	4002408AZ	4002408AZ
2	RH door panel	4002410AZ	4002410AZ
3	Front with screen	4007684AZ	4007684PW
	Barrier screen only	4007655AZ	4007655AZ

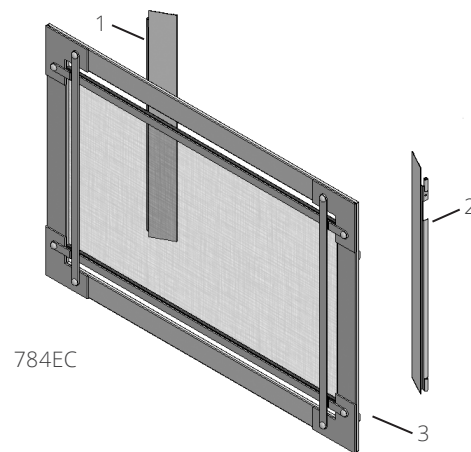

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for
Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com



Devantures Edgemont Craftsman 784EC

avec Plaques de finition 799 (vendues séparément)

Pour foyers Valor G4 780 et 785 SEULEMENT



DANGER



VITRE CHAUDE - RISQUE DE BRÛLURES.

NE TOUCHEZ PAS UNE VITRE NON REFROIDIE.

NE LAISSEZ JAMAIS UN ENFANT TOUCHER LA VITRE.

L'écran pare-étincelles fourni avec ce foyer réduit le risque de brûlure en cas de contact accidentel avec la vitre chaude et doit être installé pour la protection des enfants et des personnes à risques.

INSTALLATEUR : Laissez cette notice avec l'appareil.



CONSOMMATEUR : Conservez cette notice pour consultation ultérieure.

Note : Ce kit doit être installé ou réparé par un installateur qualifié, une agence de service certifiée ou un fournisseur de gaz. Ces instructions doivent être utilisées conjointement avec les instructions d'installation du modèle de foyer Valor indiqué ci-dessus.

La Devanture Edgemont Craftsman 784EC est conçue pour les foyers Valor G4 modèles 780 et 785. Elle doit être installée sur une des Plaques de finition à 3 côtés 799BPB-1, 799BPB-2, 799BPB-3, 799STB-1 ou la Plaque de finition à 4 côtés 799BPB-4S.

L'installation de la Devanture 784 affecte les dimensions de la cavité—voir les détails à la page suivante et dans le guide d'installation du foyer.

! Notez que le foyer devra être soulevé de 2-13/16" (72 mm) si installé avec la Plaque de finition à 4 côtés 799BPB-4S car la plaque dépasse le bas de l'appareil.

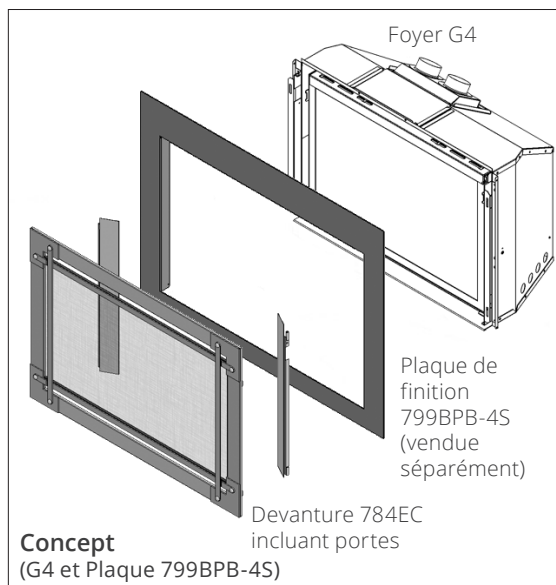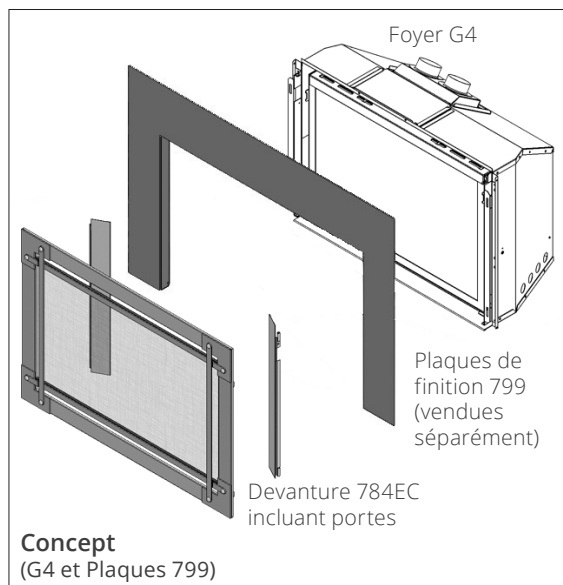


Dimensions

Avec Plaques de finition plates à 3 côtés

Dimensions minimales de cavité pour 784EC avec 799BPB


pouces [mm]

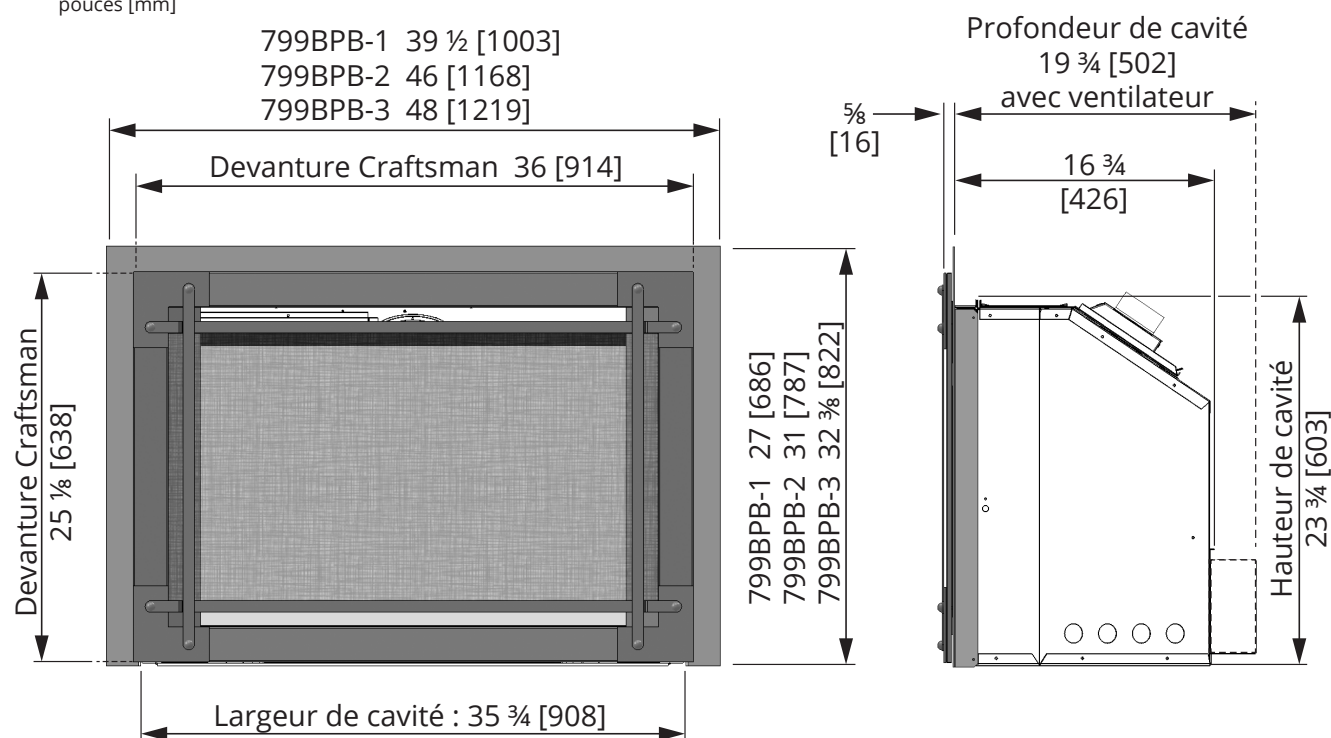

Avec Plaques de finition angulaires à 3 côtés

Dimensions minimale de cavité pour 784EC avec 799STB


pouces [mm]

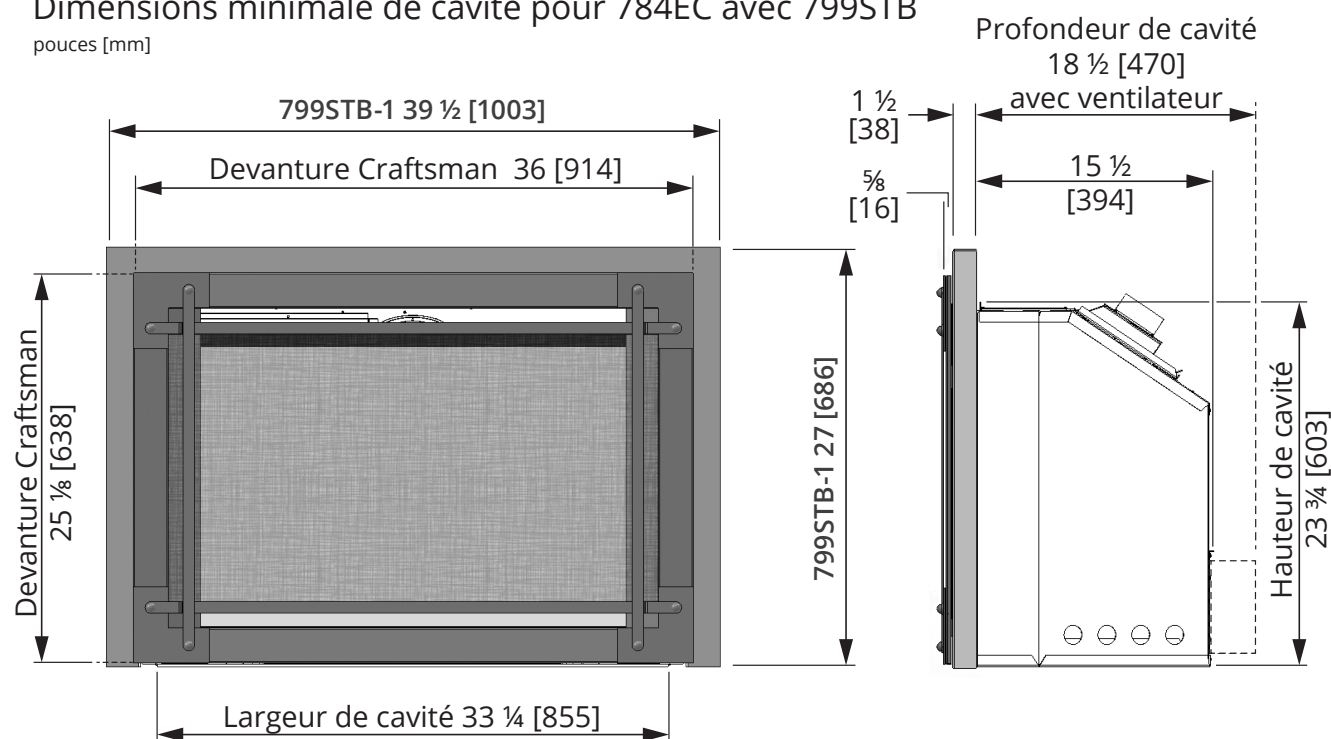

Avec Plaque de finition à 4 côtés

Dimensions minimales cavité pour 784EC avec 799BPB à 4 côtés

pouces [mm]

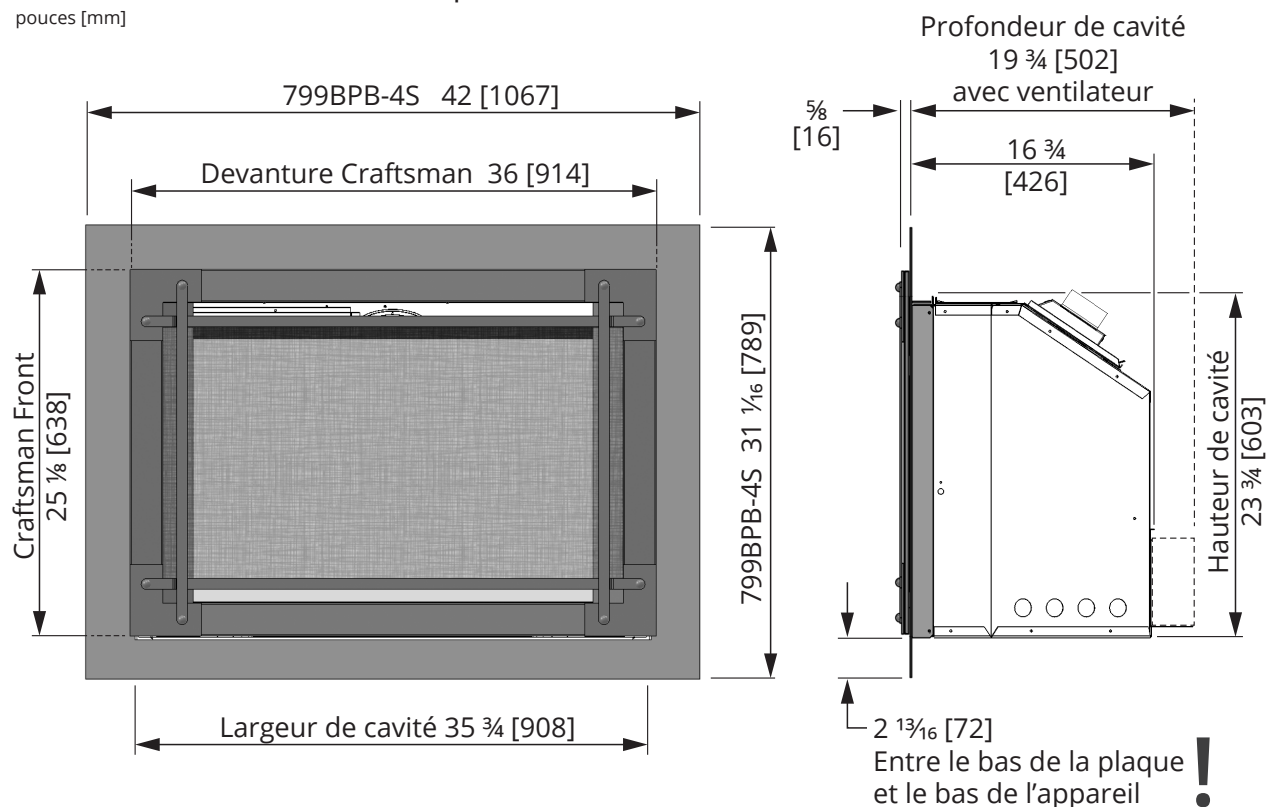


Installation

1. Fixez la plaque de finition aux supports des côtés déjà installés sur le foyer (2 vis par côté).


Note : Il est possible que vous deviez enlever les supports de montage pour fixer la plaque.

Note : Les plaques de finition à 3 ou 4 côtés s'installent de la même façon.

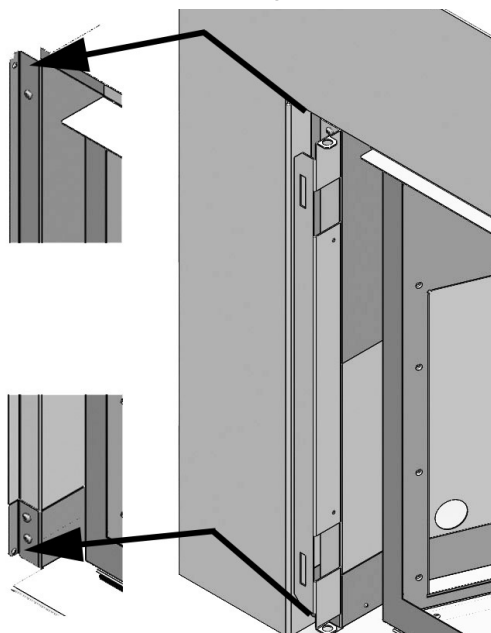


2. Identifiez les panneaux d'accès gauche et droite, de même que le haut et le bas de chacun à l'aide de l'image ci-dessous. Sur le panneau gauche, l'encoche du rebord à l'arrière est en haut. L'espace entre le rebord à l'arrière et le haut du panneau est plus large en haut qu'en bas.

Panneau d'accès gauche

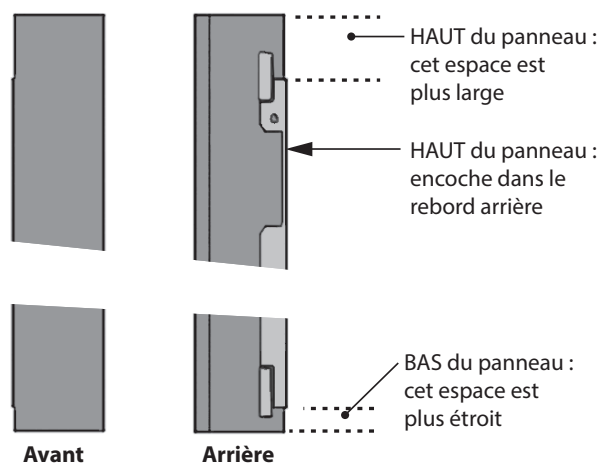


3. Insérez la cheville du haut dans le trou du support de devanture déjà installé sur l'appareil.
4. Soulevez le panneau et insérez la cheville du bas dans le trou du support. Le panneau devrait pivoter librement.

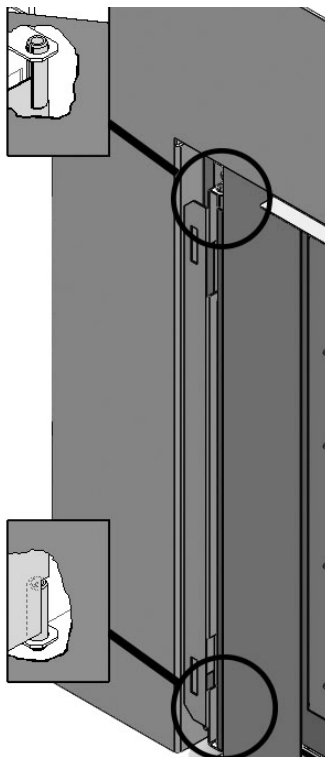

5. Installez le panneau droit de la même façon..
6. Accrochez la devanture et pare-étincelles à la plaque de finition tel qu'indiqué.

Note : Lorsqu'installé, la devanture dépasse légèrement le devant de la plaque de finition.

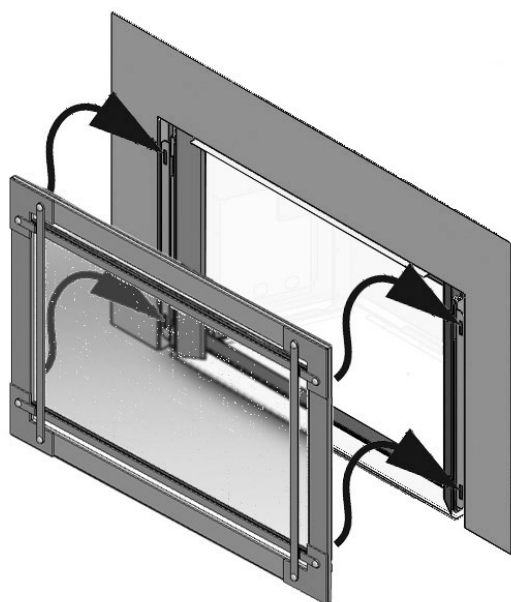

Entretien

Pour nettoyer la plaque de finition, utilisez une solution d'eau et de savon doux. Époussetez le pare-étincelles à l'aide d'une brosse à poils doux. Pour brossez l'arrière du pare-étincelles, simplement décrochez-le.

Si le pare-étincelles est endommagé, il doit être remplacé par le pare-étincelles conçu par le fabricant pour cet appareil.

Pour nettoyer la fenêtre et l'intérieur de la boîte de foyer, consultez le *Guide du propriétaire* fournis avec le foyer.






AVERTISSEMENT

NE TOUCHEZ PAS le pare-étincelles ou le foyer lorsqu'ils sont chauds! Laissez-les refroidir avant de les nettoyer.

POUR VOTRE SÉCURITÉ, assurez-vous que le pare-étincelles est réinstallé sur le foyer après l'entretien.


Liste de pièces

	Description	Pièces n°				
	Plaques de finition	799BPB-1 39-1/2" x 27"	799BPB-2 46" x 31"	799BPB-3 48" x 32-3/8"	799BPB-4S 42" x 31-1/16"	799STB-1 39-1/2" x 27"
1	à 3 côtés, plates	4005420AZ	4004446AZ	4006310AZ		
2	à 4 côtés, plates				4008669AZ	
3	à 3 côtés angulaires					4010748

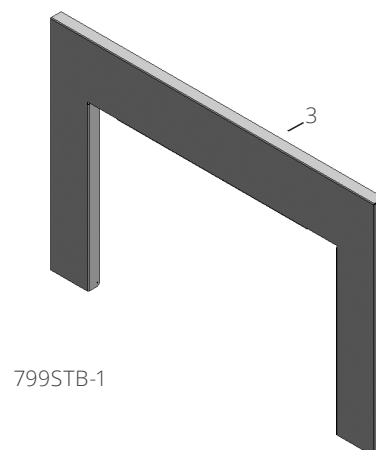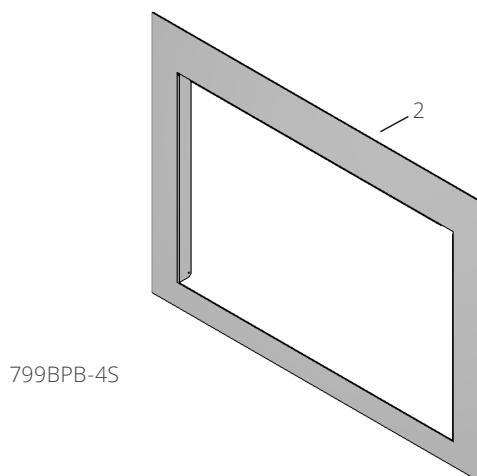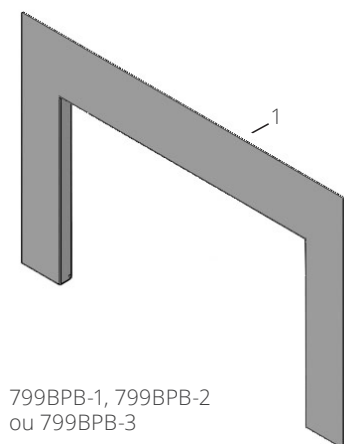

Liste de pièces

	Description	Pièces n°	
	Devantures Craftsman	784ECB Noire	784ECPW Gris étain
1	Porte gauche	4002408AZ	4002408AZ
2	Porte droite	4002410AZ	4002410AZ
3	Devanture avec pare-étincelles	4007684AZ	4007684PW
	Pare-étincelles seul.	4007655AZ	4007655AZ

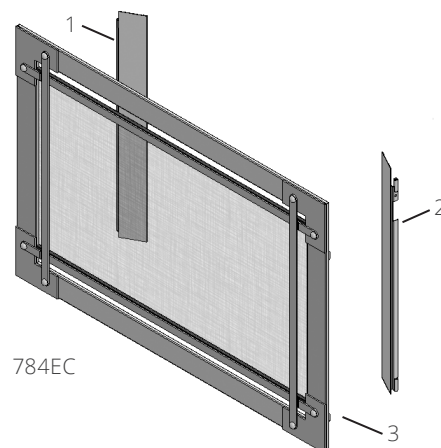

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour

Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com