

INSTALLATION MANUAL

valor[®] Horizon

Landscape Surround 663LSPW

Use on Valor heater models 534V ONLY



! DANGER



**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.


Note: This kit must be installed or serviced by a qualified installer, service agency or gas supplier. These instructions are to be used in conjunction with the main installation instructions for the above listed heater model.

The 663 Landscape Surround is designed to install on the Valor 534V heater model. All parts, including the backing plate assembly are included in the box.


The Landscape Surround is available in 663LSPW—Pewter Coated.

ATTENTION!

This kit requires non-combustible board above the fireplace opening!

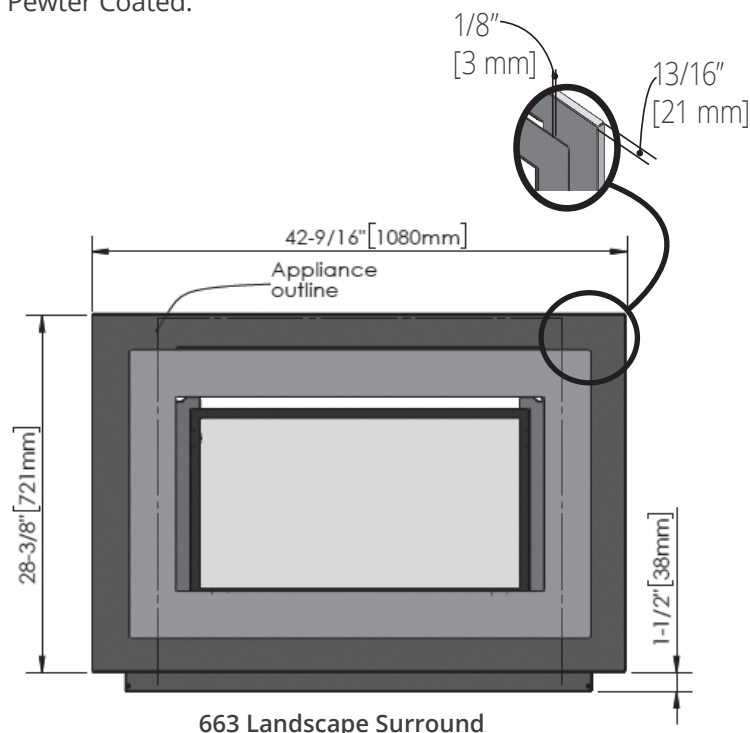

663 Landscape Surround

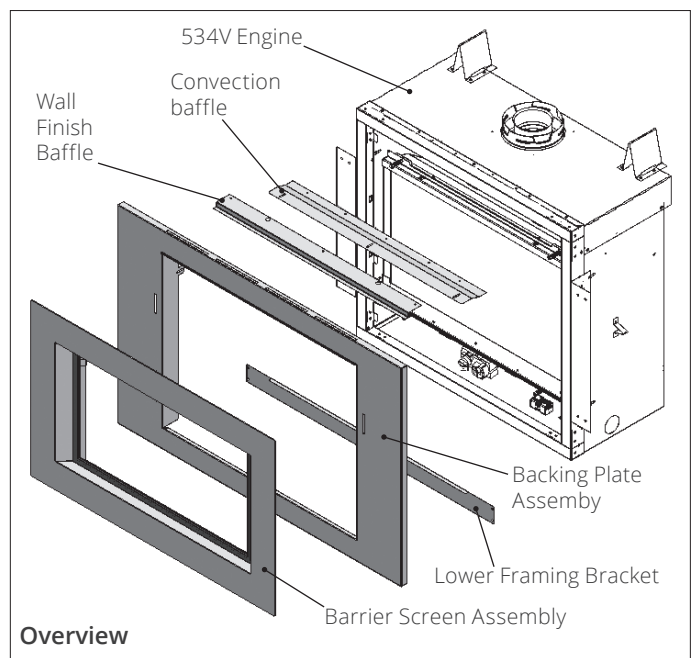


Considerations

The following parts should already be installed on the appliance as per appliance installation manual: Top heat shield and stand-offs, side stand-offs and side stud brackets.

PLEASE NOTE, the top support angle supplied with the appliance is not required with this kit. If installed, remove it, keep the screws.

With the 663LS front, a 1/2" non-combustible board (not supplied) is required above the appliance.

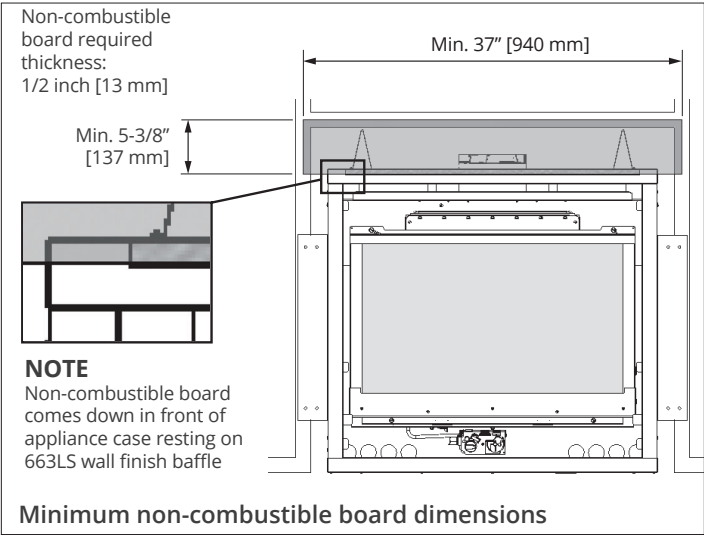


A non-combustible finish material of up to 3/4" in thickness can be installed on top of the non-combustible board for a maximum finishing material of 1-1/4" in thickness. The backing plate installs on top of the finishing material.

DO NOT COVER THE BACKING PLATE!

Finishing material can be installed at the bottom of the heater behind the backing plate up to 1-1/4" thickness; **if a hearth is to be installed, the top surface of the hearth must be flush with the bottom of the appliance.**

Combustible Mantel Clearances

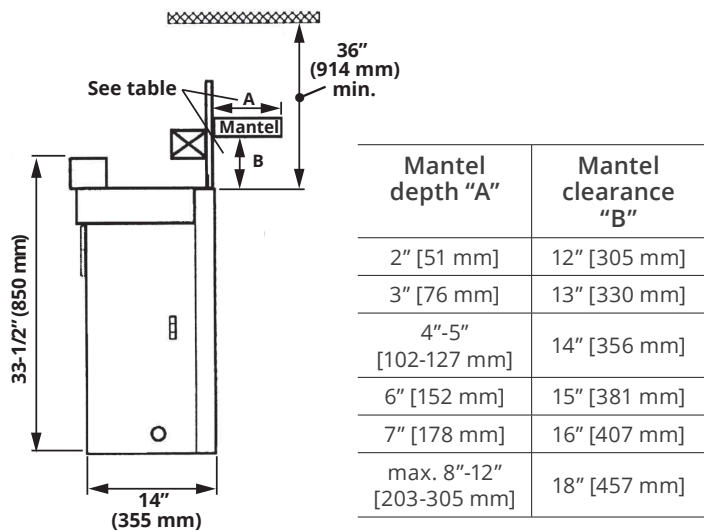


Installation


Before installing the front, make sure to cut and remove the zip ties that hold the barrier screen and the backing plate assemblies at the back. **Failure to do this will make proper installation impossible.**




- 1. On the top of the appliance's black frame remove the 3 screws to place the wall finish baffle.

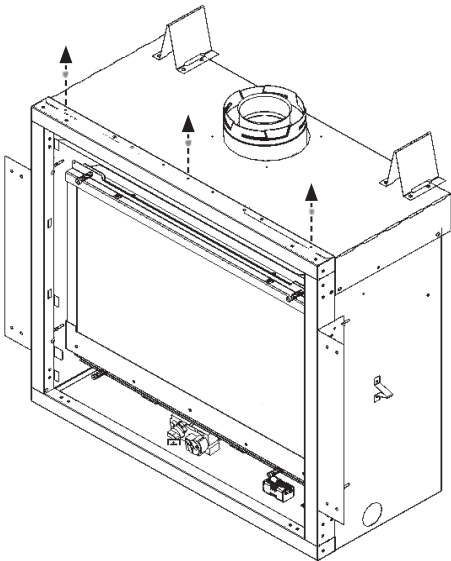


- 2. Use the same 3 screws to secure the wall finish baffle to the fireplace. Ensure the flange runs down along the fireplace as indicated.

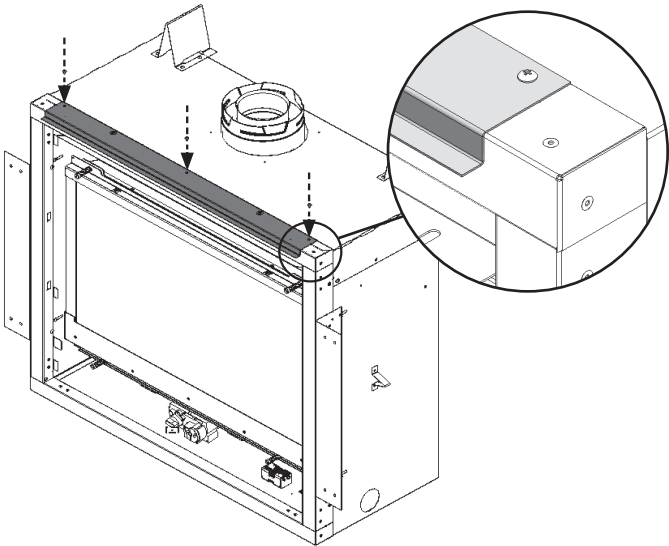


3. Attach the side brackets to the frame using 4 wood screws (not supplied) while **ensuring the appliance's black frame is flush with the studs**.

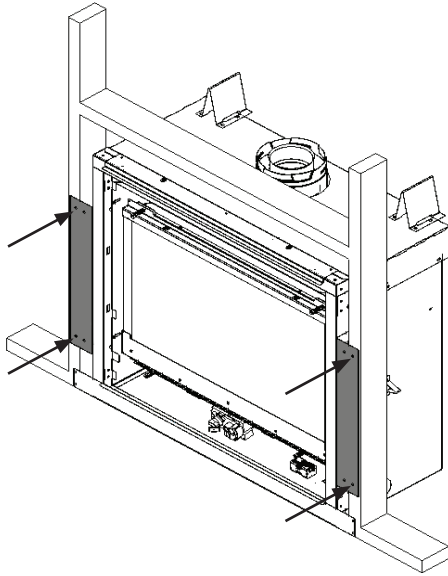


5. Place the non-combustible board panel on the wall finish baffle front flange and secure it to the framing.

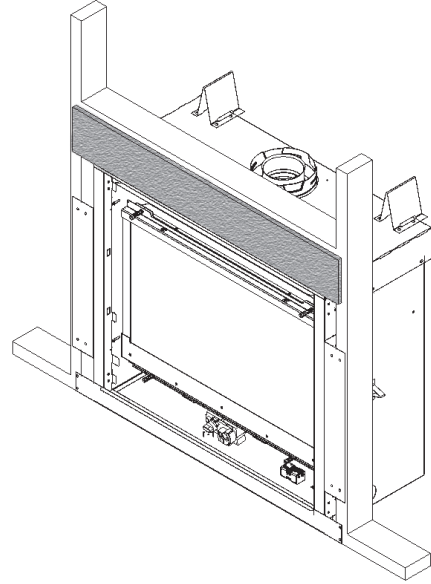


4. At the bottom of the appliance, install the lower framing bracket in front of the black frame, flange on top outward. The **bottom of the bracket must be flush with the bottom of the appliance**; secure to the studs with 4 wood screws (not supplied) .

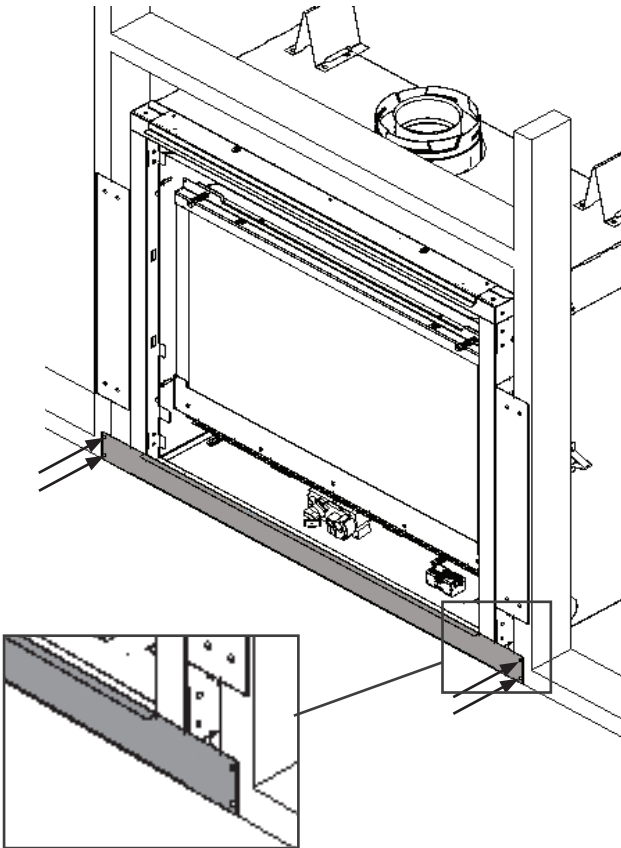


6. Complete the application of the wall finish materials.

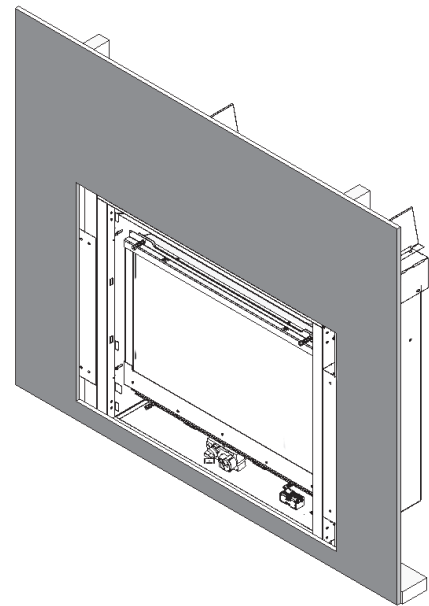


7. Under the top edge of the appliance case, remove the convection baffle that is already installed. **Keep the screws for reuse.**

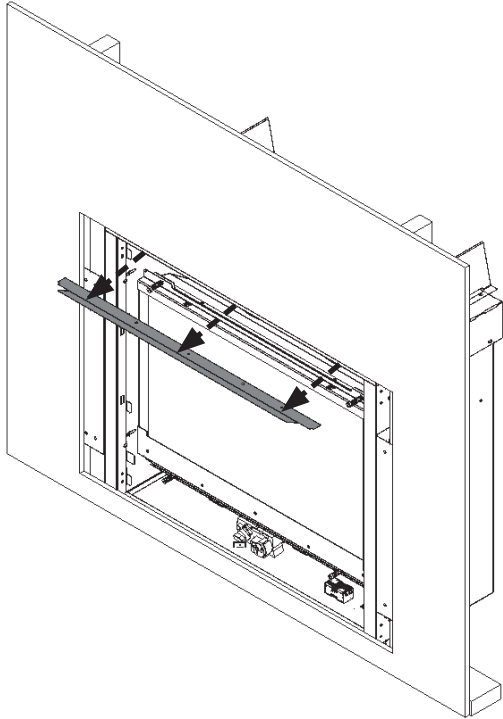


8. Using the 3 screws from the previous step, secure the convection baffle that comes with the 663LSPW trim to the case of the appliance. **Ensure the baffle is oriented correctly.**

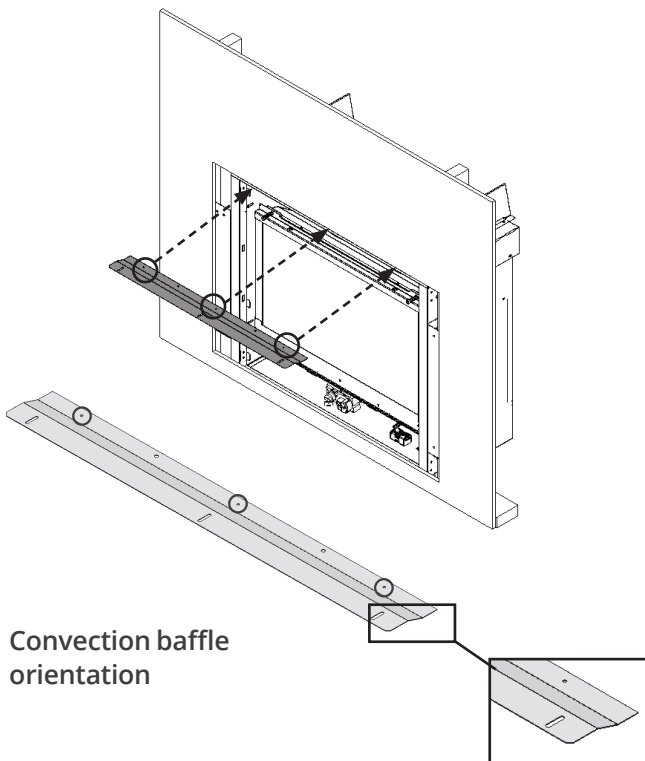


9. Install the backing plate assembly sliding its rear top flange **on top of the convection baffle** and push the backing plate against the wall finish.

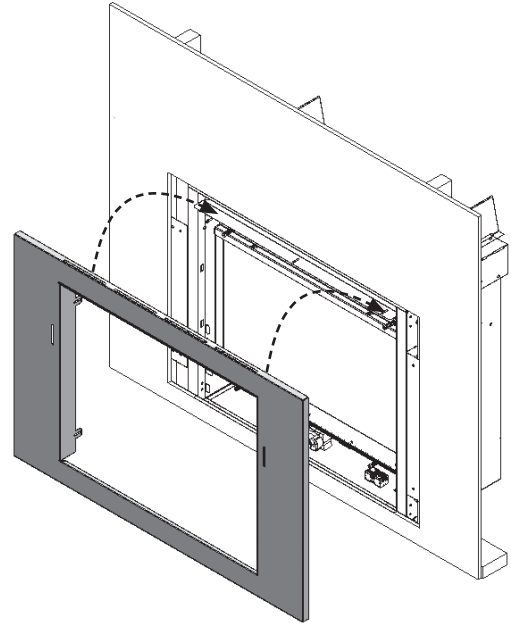

10. Secure the sides of the backing plate assembly with 4 screws from inside the appliance, then the top of the plate securing it through the bottom of the convection baffle with 3 screws supplied.

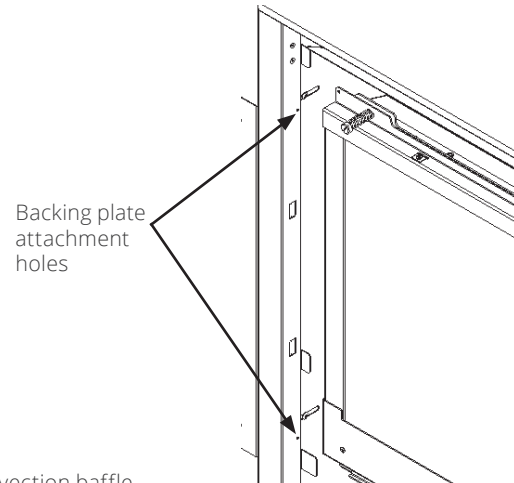


Convection baffle attachment holes

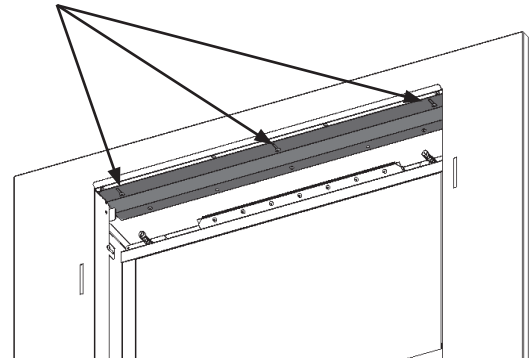

View from the underside

11. Hook the screened front to the backing plate.

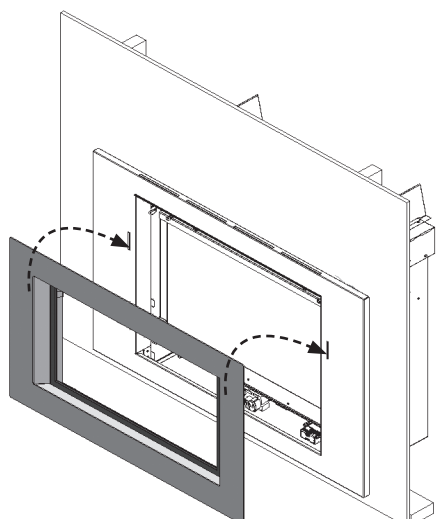

Repair Parts List

	Description	Part Number
1	Wall finish baffle	4012470
2	Backing plate assembly	4012454
3	Front panel	4012466
4	Lower framing bracket	4012471
5	Screened front	4012462
6	Convection baffle	4012102
	Screws (7)	4004560

Maintenance



WARNING


DO NOT TOUCH THE BARRIER SCREEN OR FIREPLACE WHILE THEY ARE HOT! Let the fireplace cool first before maintenance.

FOR YOUR SAFETY, ensure the barrier screen is re-installed on the fireplace front after maintenance, before use.

To clean the front trim, use mild soap and water. You can dust the screen with a soft brush. To brush the back of the screen, simply unhook the front trim.

If the barrier becomes damaged, the barrier shall be replaced with the manufacturer's barrier for this appliance.

To clean the window and ceramics inside the firebox, consult the *Homeowner's Manual* supplied with the fireplace.

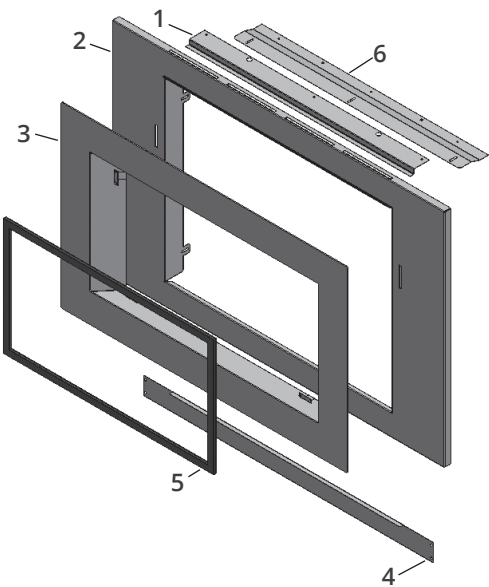

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for Miles Industries Ltd.
190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1
Tel. 604-984-3496 Fax 604-984-0246
www.valorfireplaces.com

valor[®] Horizon

Devanture panoramique 663LSPW

Utilisez avec foyers Valor 534V seulement



DANGER



VITRE CHAUDE - RISQUE DE BRÛLURES.

NE TOUCHEZ PAS UNE VITRE NON REFROIDIE.

NE LAISSEZ JAMAIS UN ENFANT TOUCHER LA VITRE.

L'écran pare-étincelles fourni avec ce foyer réduit le risque de brûlure en cas de contact accidentel avec la vitre chaude et doit être installé pour la protection des enfants et des personnes à risques.

INSTALLATEUR : Laissez cette notice avec l'appareil.

CONSOMMATEUR : Conservez cette notice pour consultation ultérieure.



Note : Ce kit doit être installé ou réparé par un installateur qualifié, une agence de service certifiée ou un fournisseur de gaz. Ces instructions doivent être utilisées conjointement avec les instructions d'installation du modèle de foyer Valor indiqué ci-dessus.

La Devanture 663LSPW est conçue pour être installée sur un foyer Valor 534V. Toutes les pièces, incluant la plaque de finition, sont incluses dans le carton.

La Devanture panoramique 663LSPW est offerte en fini peint à la poudre couleur étain.

ATTENTION!


Cette devanture exige un panneau incombustible au-dessus de l'ouverture du foyer!

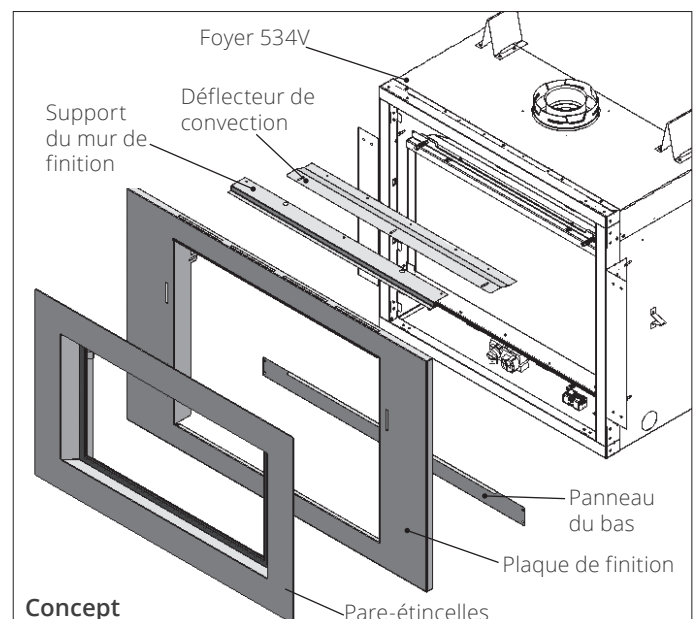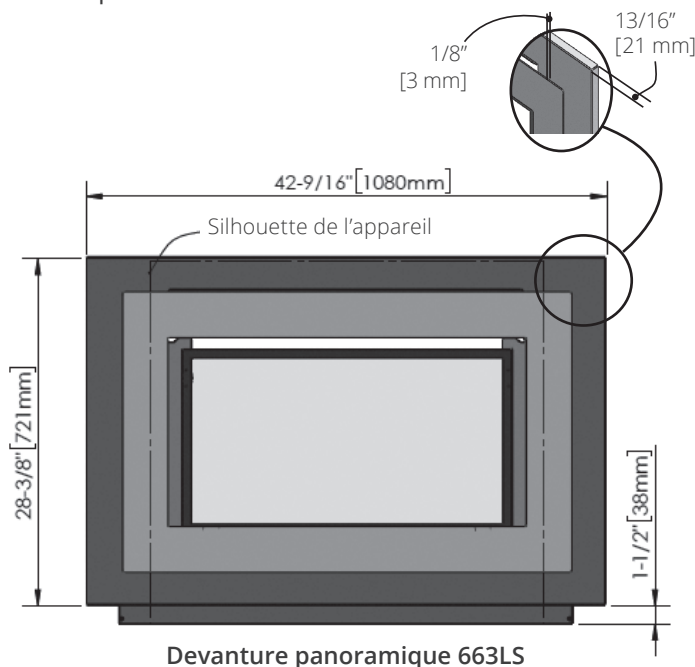

Considérations

Les pièces suivantes devraient être déjà installées sur l'appareil : paroi de protection et écarteurs du dessus, écarteurs des côtés et supports de fixation des côtés. VEUILLEZ NOTER que le support angulaire du dessus de caisse fourni avec l'appareil n'est pas requis avec cette devanture. S'il est installé, enlevez-le et gardez les vis.

Avec la devanture 663LS, un panneau incombustible (non inclus) d'une épaisseur de 1/2" est exigé au-dessus de l'appareil.

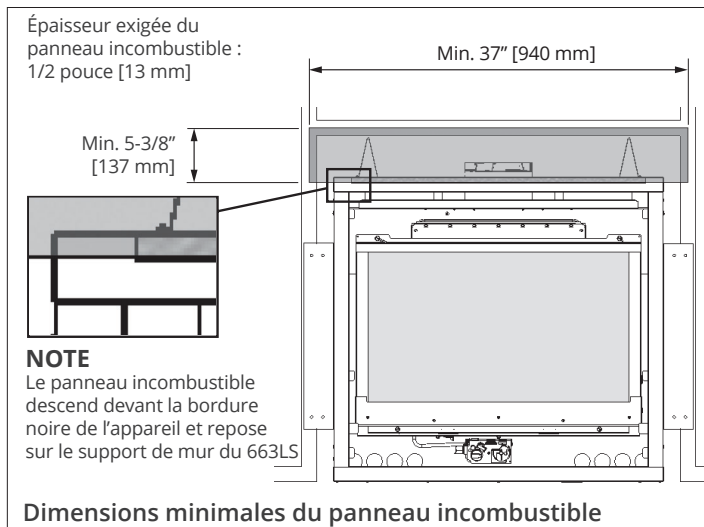


Un matériau de finition incombustible jusqu'à 3/4" d'épaisseur peut être installé par-dessus le panneau incombustible pour une épaisseur de matériaux de finition maximale de 1-1/4". La plaque de finition s'installe par-dessus la finition du mur.

NE PAS COUVRIR LA PLAQUE DE FINITION!

Un matériau de finition peut être installé au bas de l'appareil derrière la plaque de finition à une épaisseur maximale de 1-1/4".

Si une dalle doit être installée, la surface de la dalle devant le foyer doit être affleurante (égale) avec le bas de l'appareil.

Dégagements aux combustibles—manteau

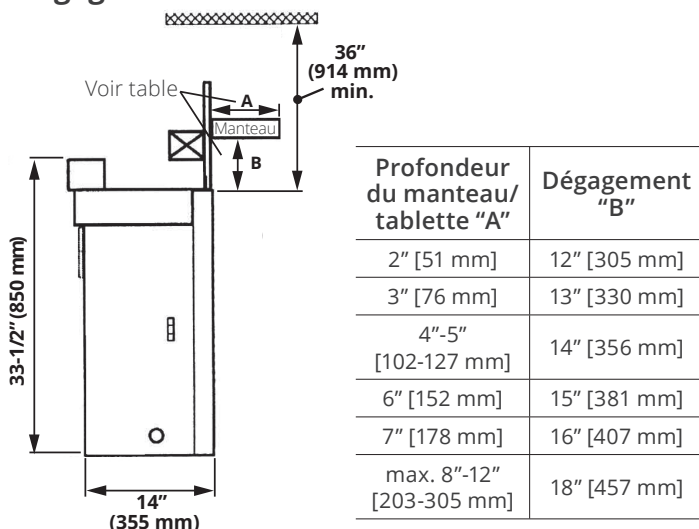


Installation


Avant d'installer la devanture, assurez-vous de couper et retirer, à l'arrière, les attaches auto-bloquantes la retenant à la plaque de finition. **Autrement, il ne sera pas possible de l'installer.**




1. Sur le dessus du cadre noir de l'appareil, enlevez 3 vis pour y installer le support de finition du mur.

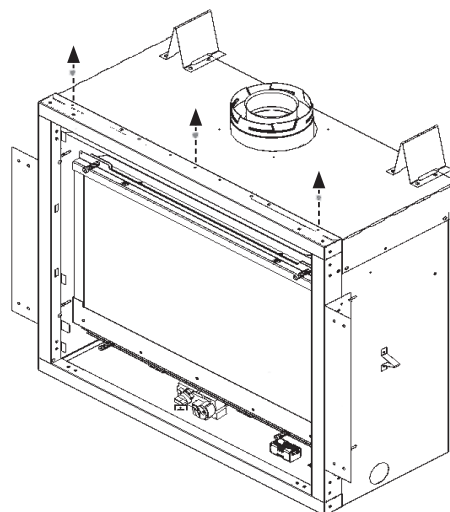


2. Utilisez les mêmes 3 vis pour fixer le support de finition du mur au foyer. Notez son orientation; le support descend devant le cadre noir du foyer.

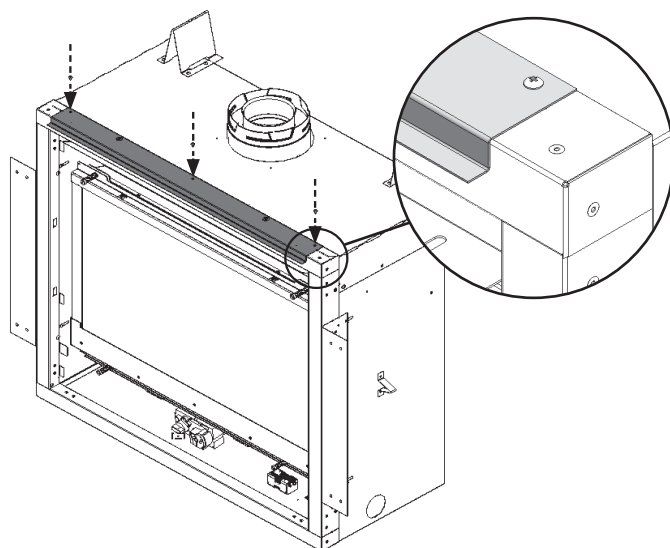


3. Insérez l'appareil dans la charpente et fixez ses supports des côtés aux poteaux avec 2 vis à bois (non incluses) de chaque côté. **Assurez-vous que l'appareil soit égale à la charpente.**

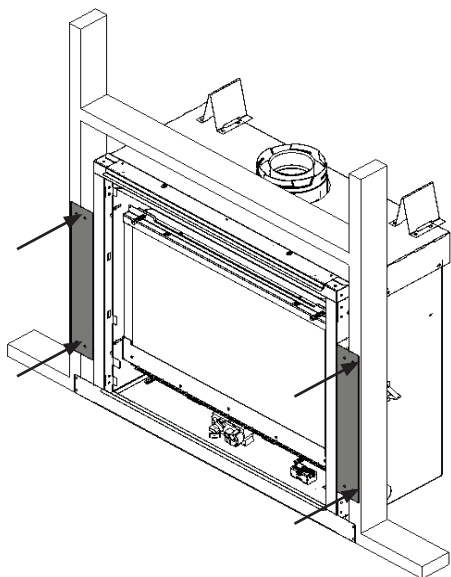


4. Au bas de l'appareil, placez le panneau du bas devant le cadre noir, rebord en haut vers l'extérieur. **Le bas du panneau doit être égal à la base de l'appareil;** fixez-le avec 4 vis à bois (non incluses).

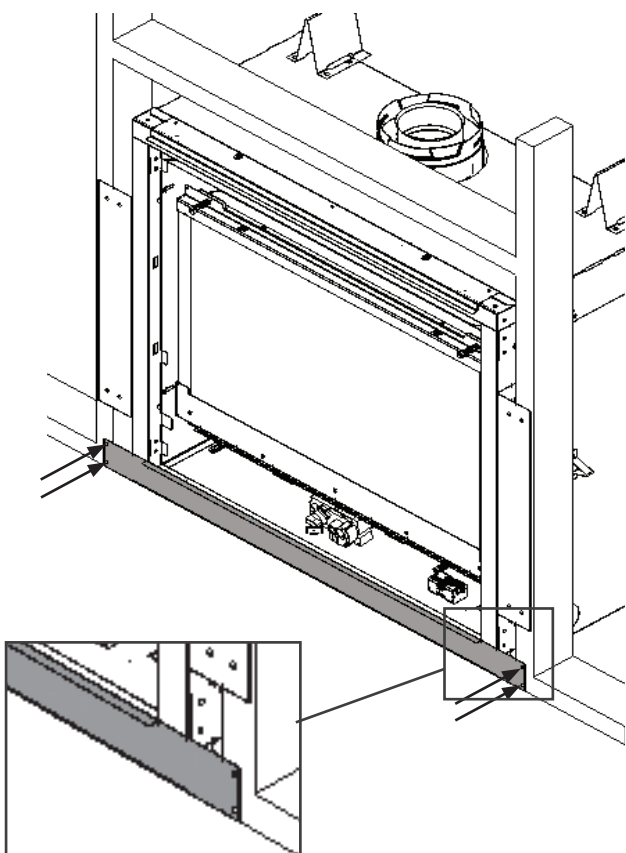


5. Installez le panneau incombustible, le posant sur le rebord avant du support de finition du mur puis fixez-le à la charpente.

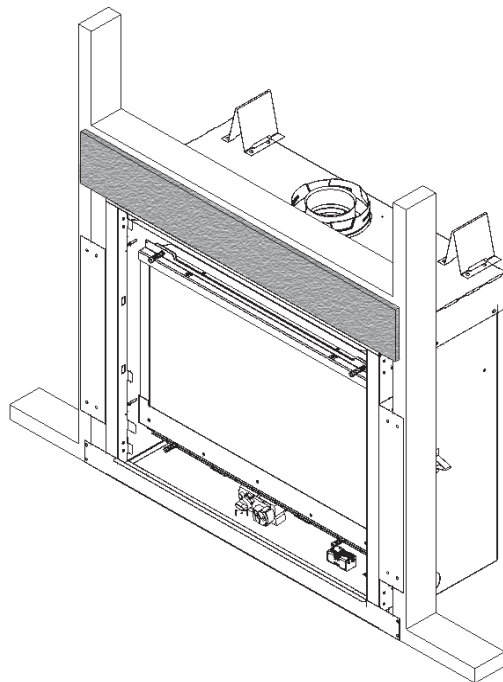


6. Appliquez la finition du mur.

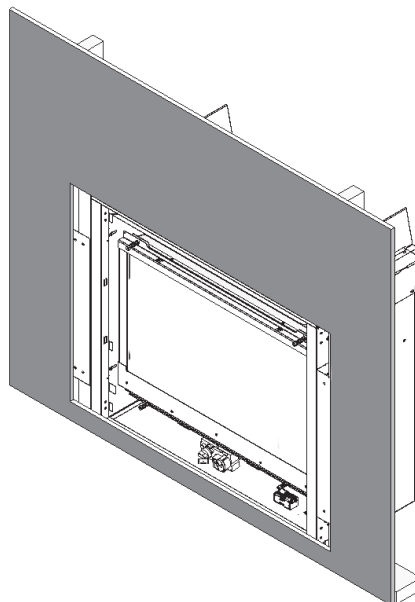


7. Sous le rebord supérieur de la caisse du foyer, enlevez le déflecteur de convection déjà installé. **Conservez les vis pour les réutiliser.**

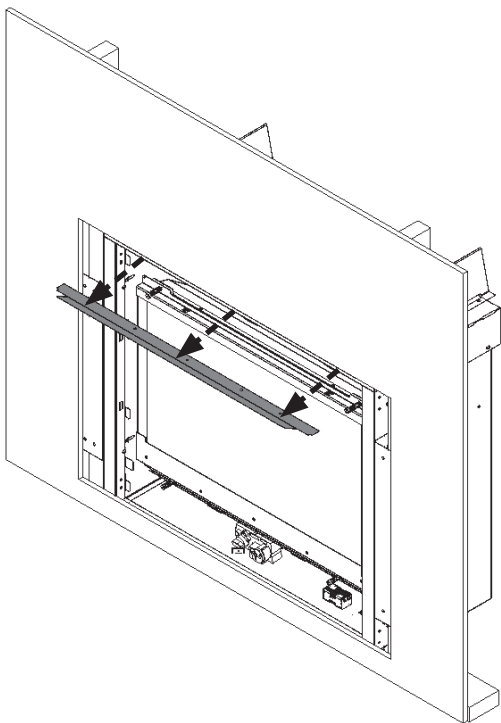


8. À l'aide des 3 vis de l'étape précédente, fixez le déflecteur de convection fourni avec la devanture 663LSPW à la caisse de l'appareil. **Assurez-vous que le déflecteur soit correctement orienté.**

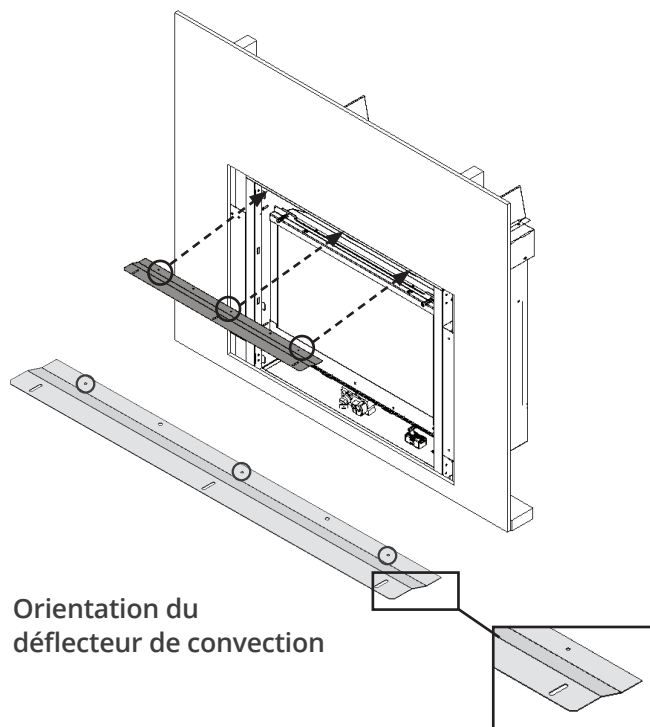


9. Installez la plaque de finition, la glissant **sur le dessus du déflecteur de convection**, puis poussez la plaque contre la finition du mur.

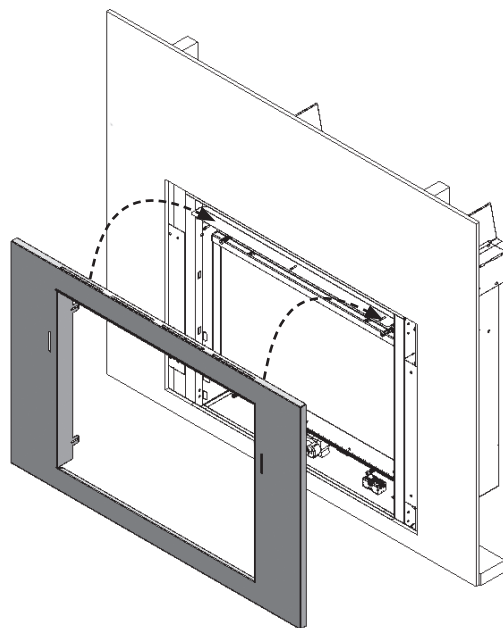

10. Fixez les côtés de la plaque de finition avec 4 vis depuis l'intérieur de l'appareil; puis fixez le haut de la plaque à travers le dessus du déflecteur de convection avec 3 vis.

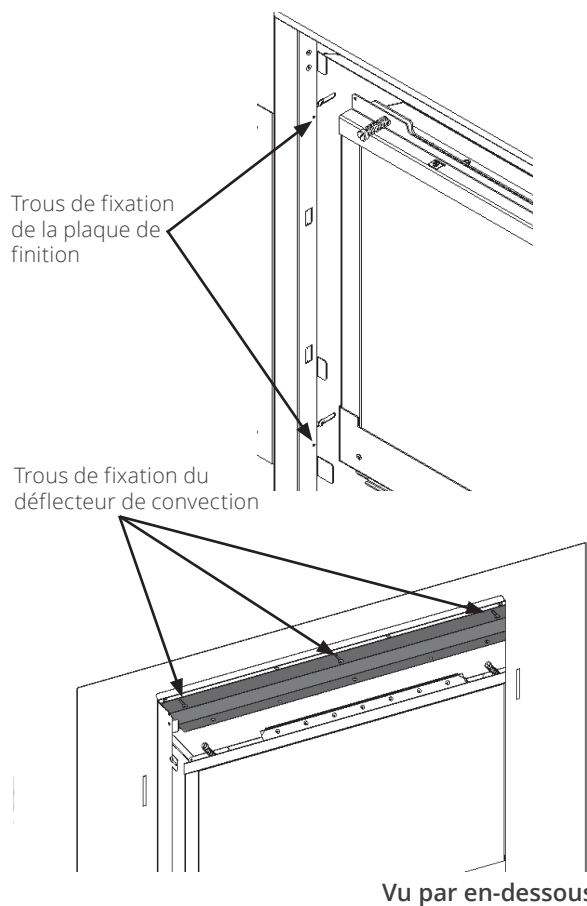

11. Accrochez le pare-étincelles sur la plaque de finition.

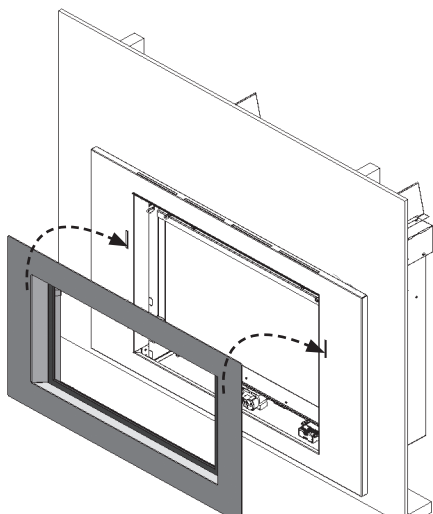

Liste de pièces

	Description	Numéro de pièces
1	Support du mur de finition	4012470
2	Plaque de finition	4012454
3	Panneau avant	4012466
4	Panneau du bas	4012471
5	Pare-étincelles	4012462
6	Défecteur de convection	4012102
	Vis (7)	100A757

Entretien



AVERTISSEMENT


NE TOUCHEZ PAS LE PARE-ÉTINCELLES OU LE FOYER LORSQU'ILS SONT CHAUDS!
Laissez les refroidir avant de les nettoyer.

POUR DES RAISONS DE SÉCURITÉ, assurez-vous que le pare-étincelles soit réinstallé sur la devanture avant d'utiliser le foyer.

Pour nettoyer la bordure, utilisez une solution d'eau et de savon doux. Époussetez le pare-étincelles à l'aide d'une brosse à poils doux. Pour brossez l'arrière du pare-étincelles, décrochez simplement la bordure.

Si le pare-étincelles est endommagé, il doit être remplacé par le pare-étincelles conçu par le fabricant pour cet appareil.

Pour nettoyer la fenêtre et l'intérieur de la boîte de foyer, consultez le *Guide du propriétaire* fourni avec le foyer.

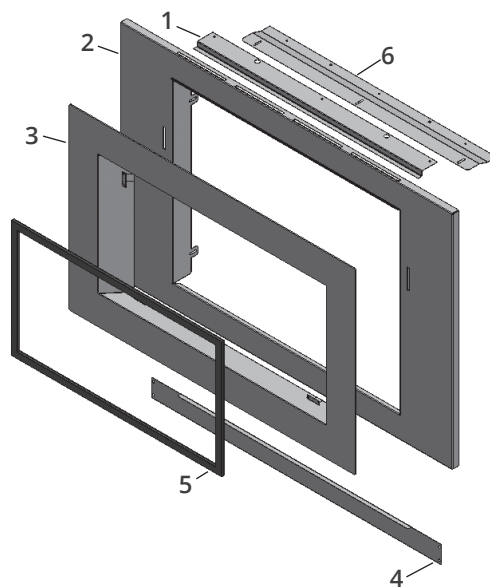

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com