


INSTALLATION INSTRUCTIONS


HE6CIK—HE6 Clean Installation Front For HE6 Electric Fireplace Insert

NOT FOR USE WITH GAS MODEL FIREPLACES

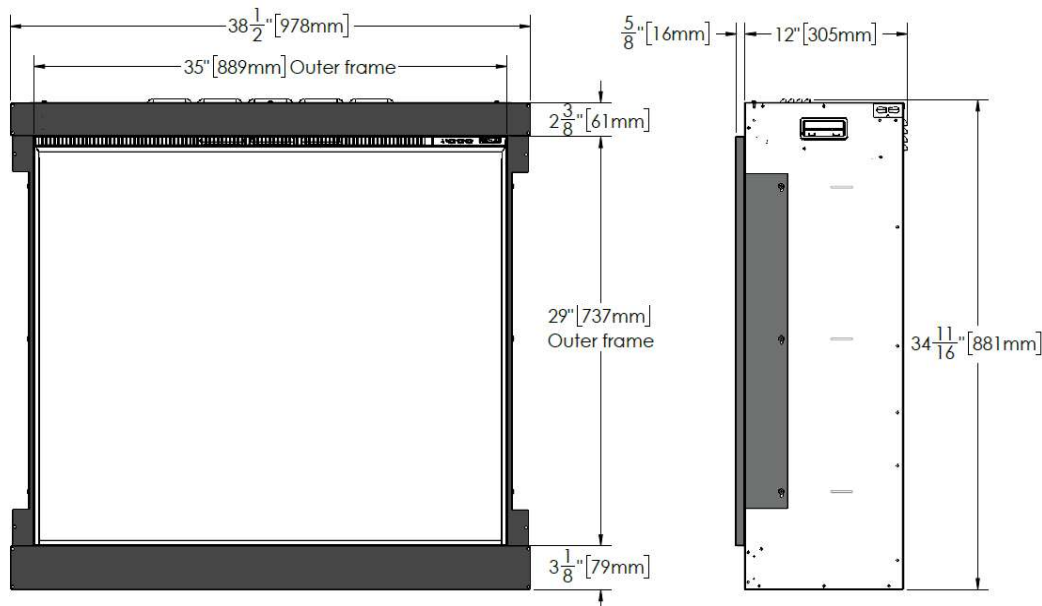

NOTE


- Installing the HE6 with a CIK kit will make the appliance permanently recessed into the wall cavity.
- The HE6 appliance is supplied with a power cord that will require a receptacle to plug into. Alternatively, the appliance can be hard-wired—see the HE6 installation manual for details.
- Consider accessibility to the receptacle if using the plug-in power cord to power the appliance. Consult federal and local codes.

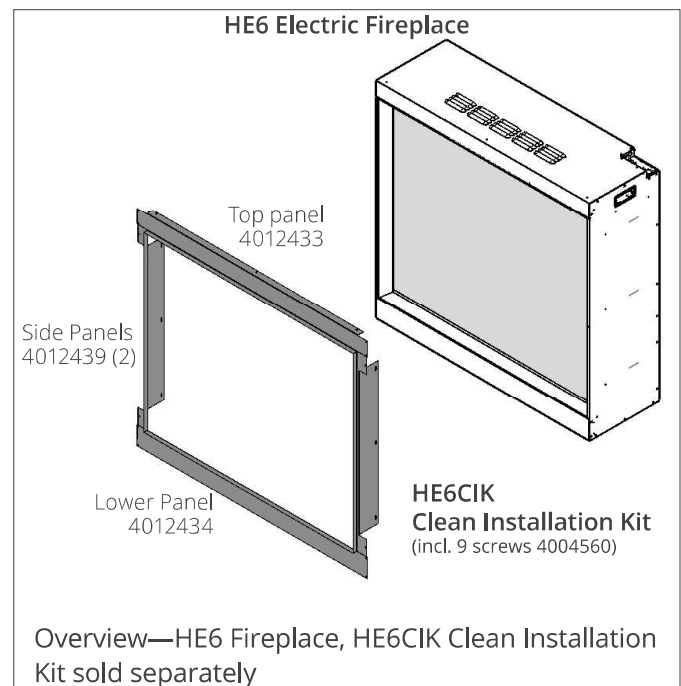


Installation

The HE6CIK allows wall finish to be brought up to the fireplace's opening.

1. Install the top panel onto the appliance and fasten with 3 supplied screws.

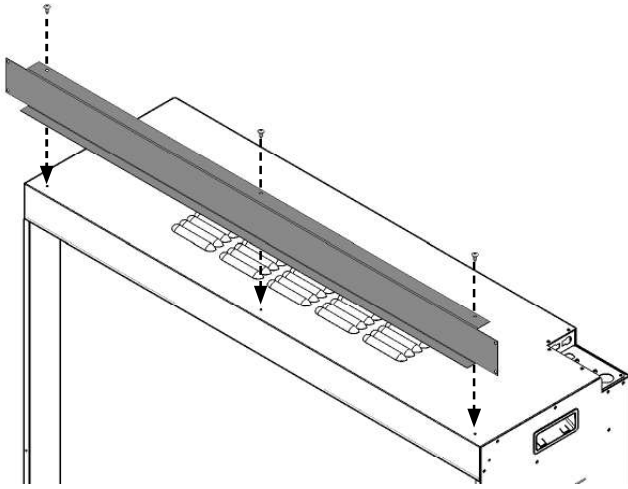


2. Place any side panel on the right side of the appliance and secure it with 3 supplied screws.

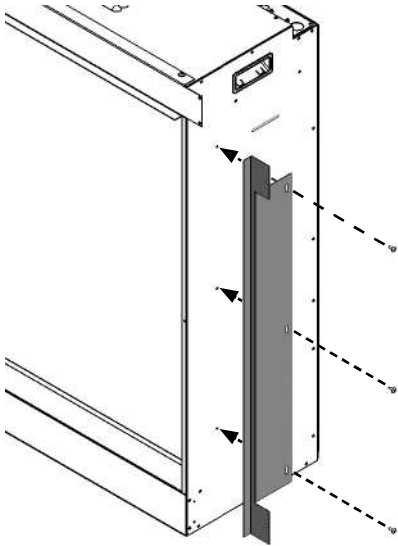


3. Install the other side panel on the left side of the appliance in the same manner as the previous step.

4. Insert the appliance into framing and secure it on each side with 8 wood screws (not supplied).

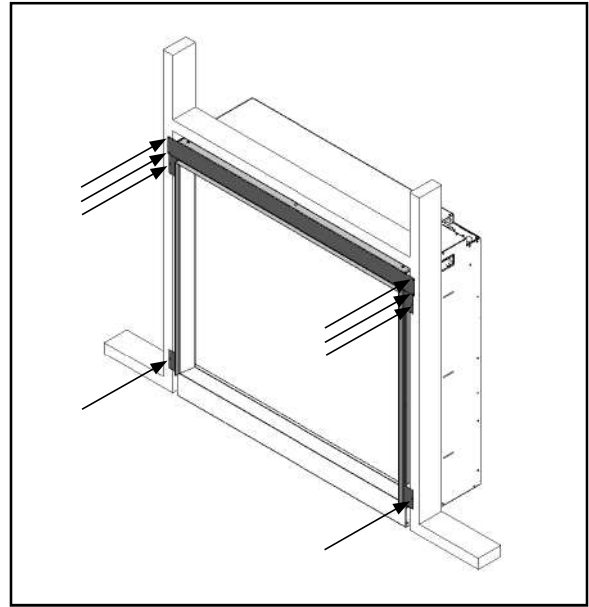

5. Install the lower panel by securing it to the side studs using 4 wood screws (not supplied), leaving the shorter flange flush with the bottom of the fireplace opening.

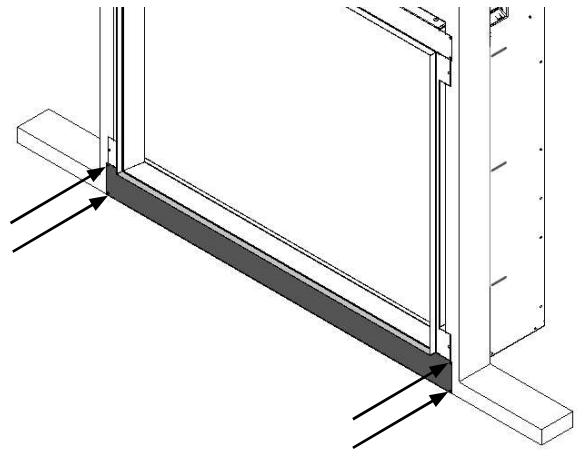

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1


Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com

GUIDE D'INSTALLATION

HE6CIK—HE6 Bordure minimaliste pour foyer électrique HE6


NE PAS UTILISER AVEC LES FOYERS À GAZ

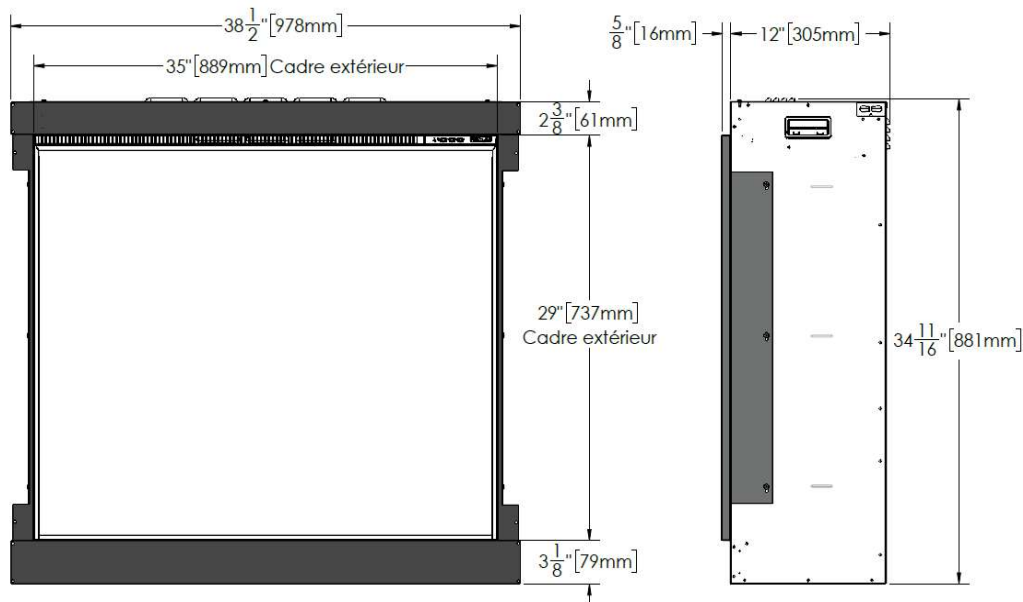

NOTE

- L'installation du foyer HE6 avec la bordure minimaliste CIK rendra l'appareil encastré dans le mur de façon permanente.
- Le foyer HE6 inclut un cordon d'alimentation à brancher dans une prise de courant. Alternativement, le foyer peut être câblé—voir le guide d'installation fourni avec le HE6.
- Prenez en considération la facilité d'accès à la prise de courant si vous utilisez le cordon d'alimentation. Consultez les normes locales et nationales.

Foyer électrique HE6

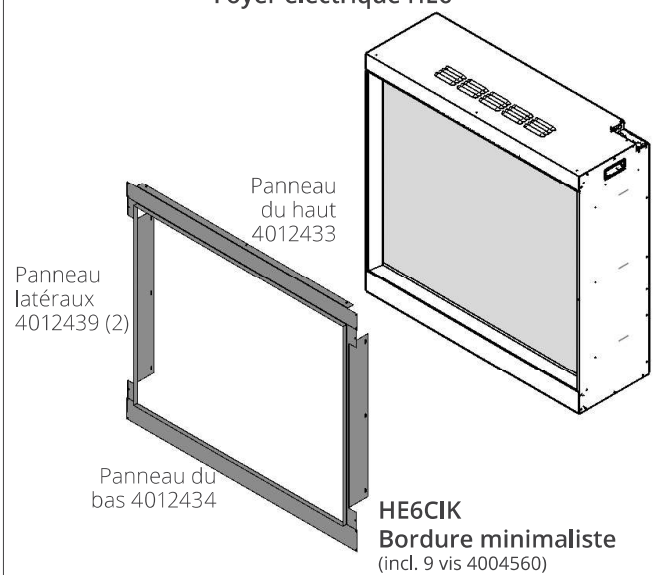


Concept—Foyer HE6 Bordure minimaliste HE6CIK
Vendus séparément


Installation

La HE6CIK permet d'amener la finition du mur jusqu'à l'ouverture du foyer en l'aboutant au rebord de sa bordure.

1. Installez le panneau du haut sur l'appareil et fixez-le avec 3 vis fournies.

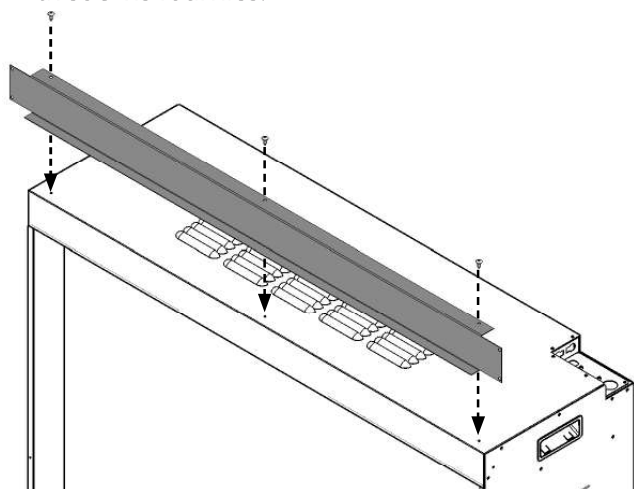


2. Placez un panneau latéral du côté droit et fixez-le avec 3 vis fournies.

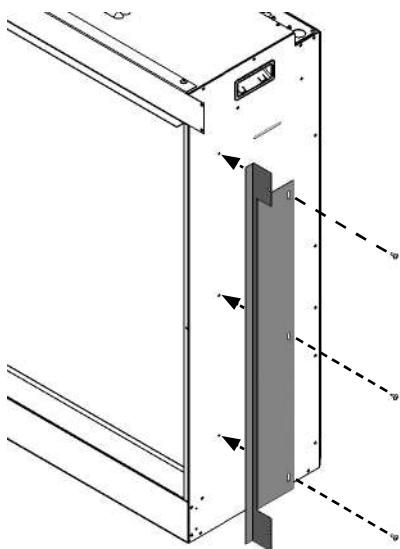


3. Installez l'autre panneau du côté gauche et fixez-le avec 3 vis fournies.

4. Insérez l'appareil dans l'encadrement et fixez-le de chaque côté avec 8 vis à bois (non fournies).

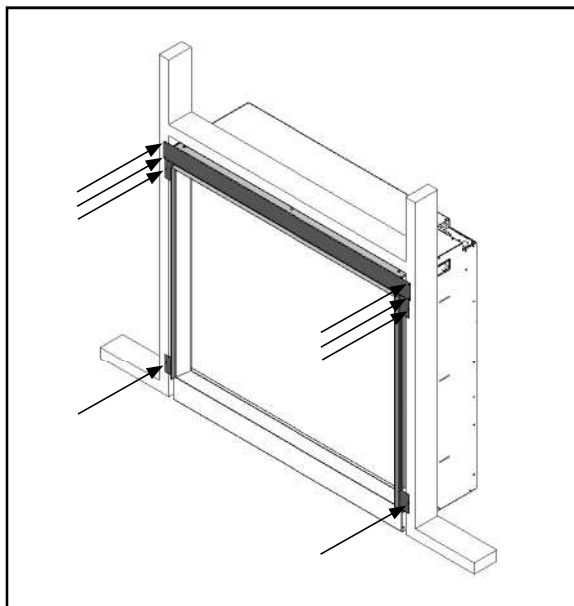

5. Installez le panneau du bas sur les montants latéraux et fixez-le à l'aide de 4 vis à bois (non fournies). Assurez-vous que le rebord plus petit du panneau soit affleurant avec le bas de l'ouverture de l'appareil.

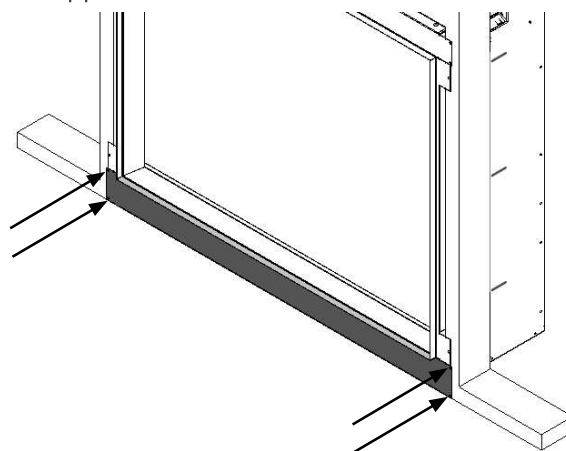

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com