
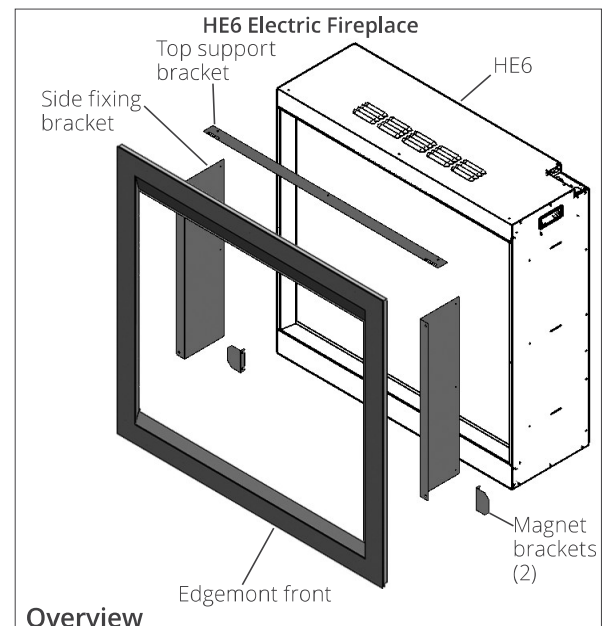


INSTALLATION INSTRUCTIONS

HE6DPW—HE6 Edgemont Front For HE6 Electric Fireplace


NOT FOR USE WITH GAS MODEL FIREPLACES

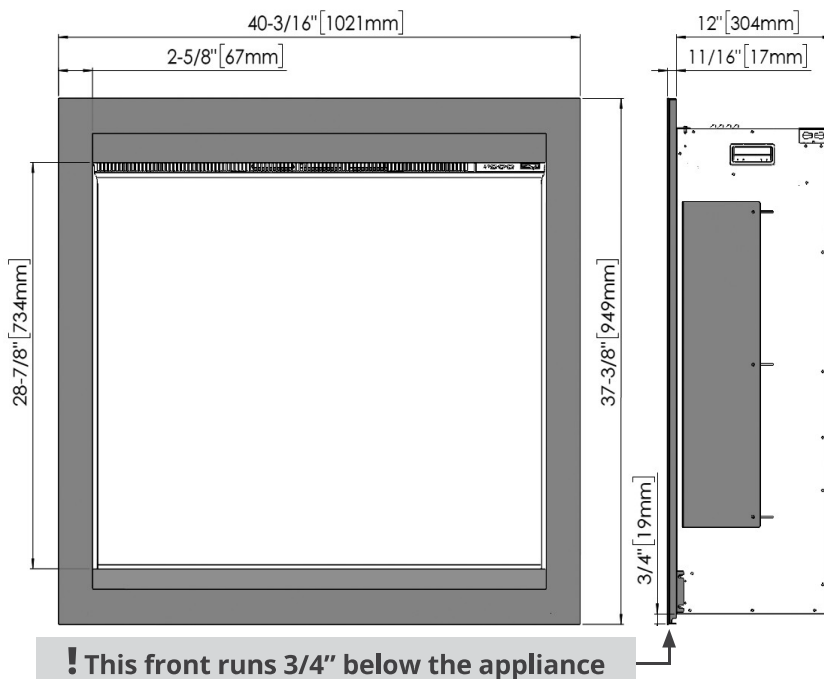




Installation

The HE6DPW is held in place by hooks and magnets. Hooks are already installed on the back of the front. Top support bracket and bottom magnet brackets, supplied loose, must be installed to the fireplace.

1. Install the top support bracket and secure it with 3 supplied screws.

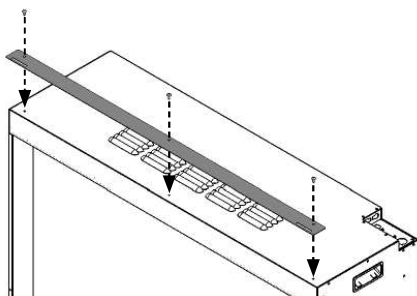

2. Loosen the 2 bottom screws on each side of the appliance. **Do not remove them.** Then, slide the magnet brackets behind the screw heads, then retighten them on both sides.

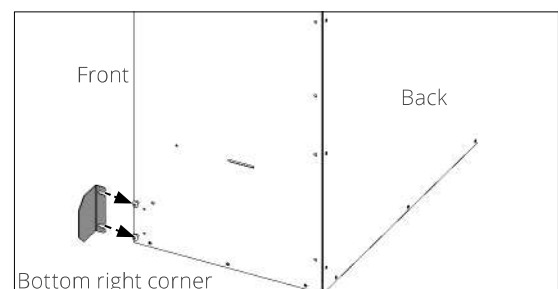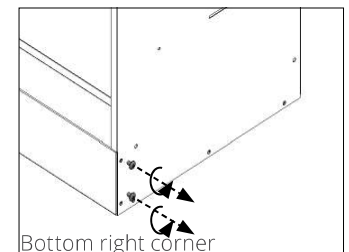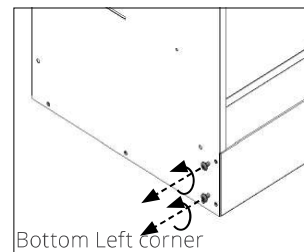


3. **Optional.** Side fixing brackets are supplied with this kit to secure the appliance to framing if desired. If not, skip this step and go to step 4.


- a. Once the window is removed (see installation manual for instructions), remove the internal lateral panels completely by grabbing them from the top corner. **Make sure to wear gloves since these panels are sharp and be careful not to scratch the fireplace.**




- b. Secure the side fixing brackets from inside the fireplace with 3 screws provided on each side. **Do not tighten them completely and do not reinstall the internal lateral panels yet.**

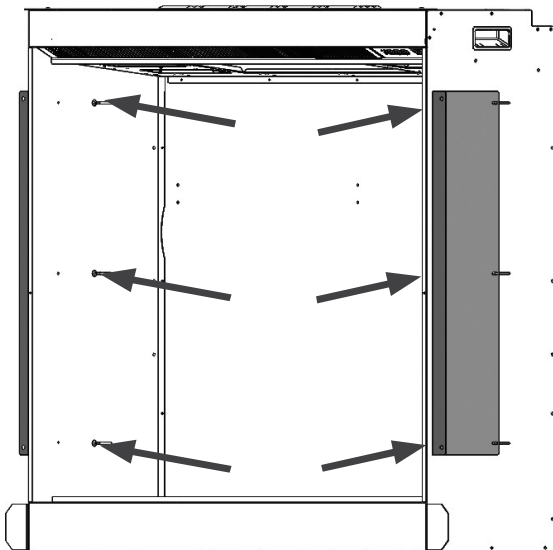


- c. Slide the fireplace in the cavity until its side fixing brackets touch the studs.

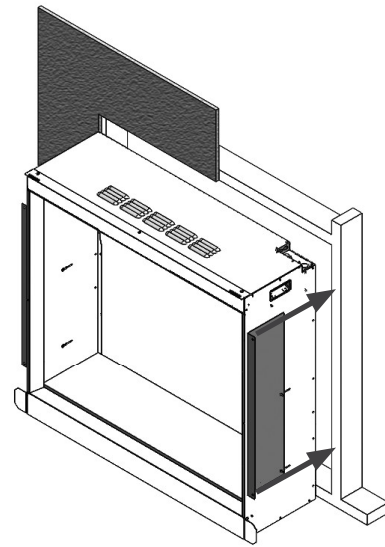

- d. Secure the side fixing brackets to studs with 4 wood screws (not supplied).

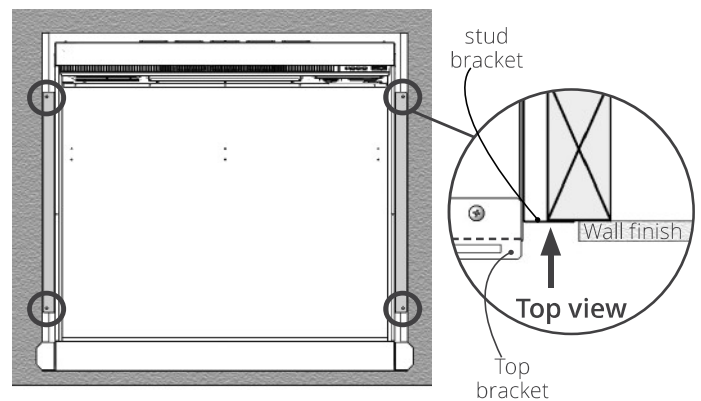

4. Before inserting the fireplace fully into framing, hook the front by engaging the top hook first and, gently, letting the bottom magnets engage with the magnet brackets at the bottom. Once the front is hooked, push the appliance into the framing until the front touches the wall finish.

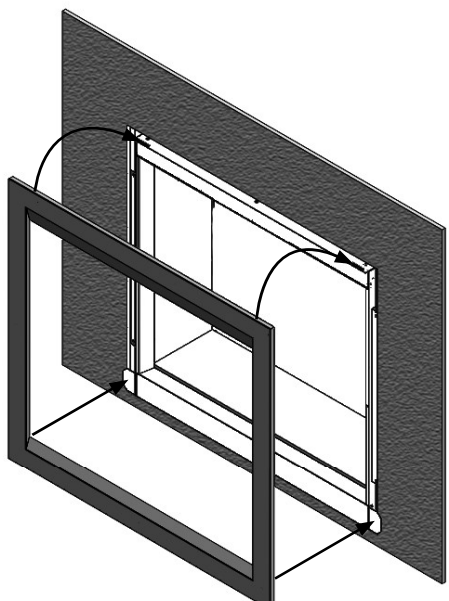


Side fixing brackets: If the side fixing brackets were installed, tighten fully their screws from inside the fireplace, then reinstall the internal lateral panels.



5. Continue installation as per manual supplied with the fireplace.

Repair Parts List

	Description	Part Number
1	Edgemont front	4012507
2	Horizontal bottom bracket	4012505
3	RS vertical bracket	4012509
4	Magnet backet (2)	4012500
5	Ceramic magnets (2)	4011031
6	Side fixing bracket (2)	4012501
7	LS vertical bracket	4012506
8	Top horizontal bracket	4012480
9	Hook bracket	4012724
10	Hooks support bracket	4012502
	Screws (9)	4004560
	Nuts (12)	4000538

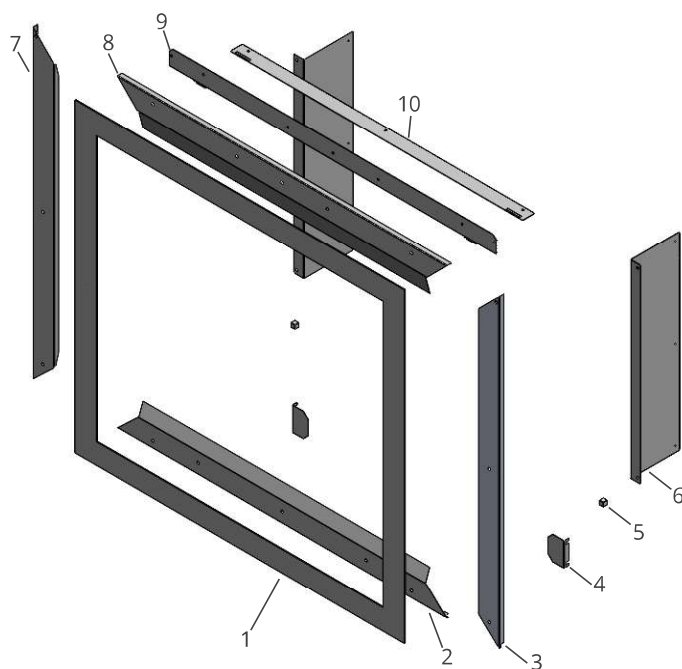

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1



Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com

GUIDE D'INSTALLATION

HE6EDPW—Devanture Edgemont étain pour foyer électrique HE6


NE PAS UTILISER AVEC LES FOYERS À GAZ

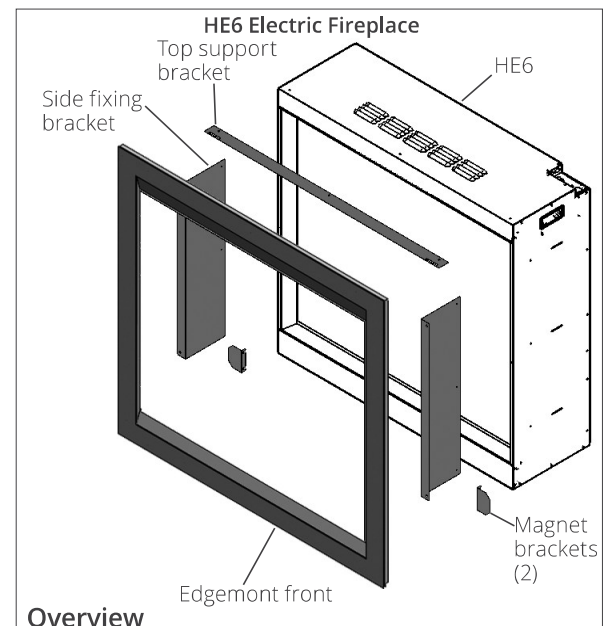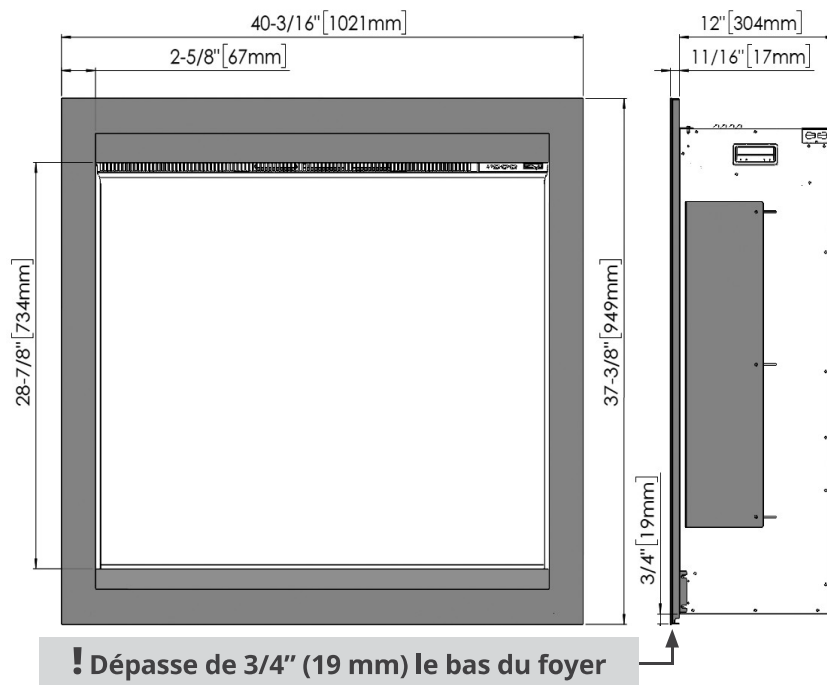


Installation

La devanture HE6EDPW est tenue en place par des crochets et aimants. Les crochets sont déjà installés au dos de la devanture. Le support du haut et les supports d'aimant fournis doivent être installés sur le foyer..


1. Installez le support d'accrochage sur le foyer et fixez-le avec 3 vis fournis.

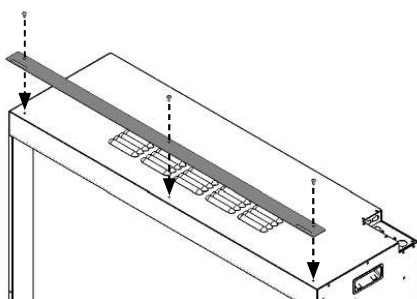


2. Dévissez, sans les enlever, 2 vis sur chaque côté au bas de l'appareil. Insérez les supports d'aimants sous les têtes de vis tel qu'indiqué. Reserrez les vis.

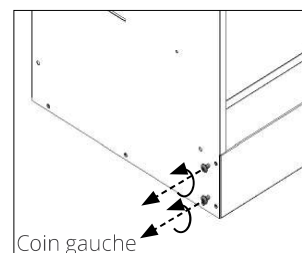

Coin gauche

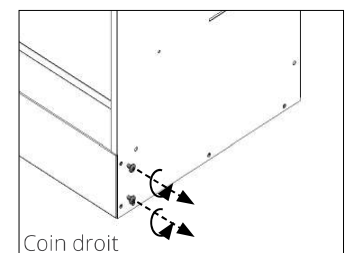

Coin droit

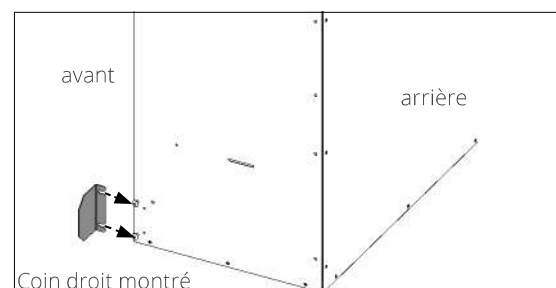


Coin droit montré

3. **Supports de montage optionnels.** Des supports de montage sont fournis avec cette trousse afin de sécuriser l'appareil à la charpente d'encastrement si désiré. Sinon, ignorez cette étape et allez à l'étape 4.


- a. Une fois la fenêtre enlevée (voir guide d'installation du foyer pour la procédure), enlevez les parois latérales intérieures en tirant sur leur coin supérieur. **Portez des gants pour éviter de vous couper sur ces parois et faites attention de ne pas égratigner le foyer en les manoeuvrant.**




- b. Fixez les supports de montage à partir de l'intérieur du foyer avec 3 vis par côté. **Ne serrez pas les vis complètement tout de suite afin de pouvoir faire des ajustements. Ne réinstallez pas les parois maintenant.**

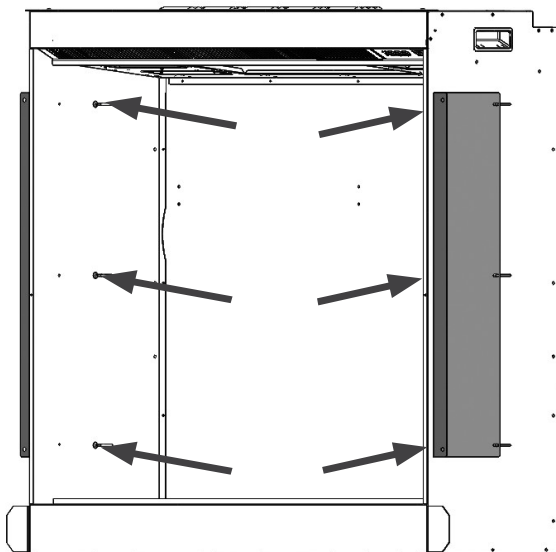


- c. Insérez l'appareil partiellement dans la charpente jusqu'à ce que les supports de montage touchent les poteaux de la charpente.

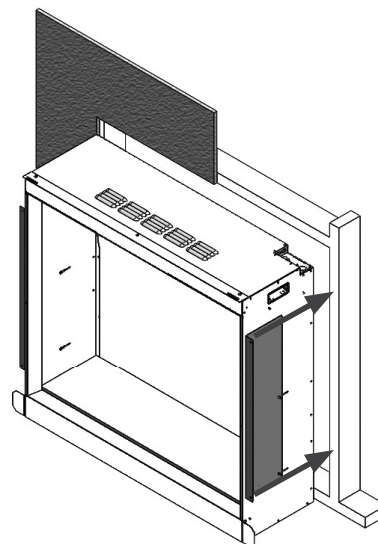

- d. Fixez les supports de montage aux poteaux avec 4 vis à bois (non incluses).

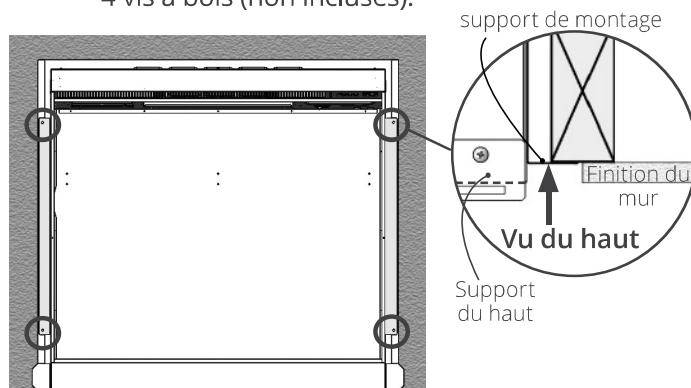

4. Avant d'insérer le foyer complètement, accrochez la devanture sur le support du haut puis fixez-en le bas aimanté aux supports d'aimants. Poussez ensuite l'appareil dans la charpente jusqu'à ce que l'arrière de la devanture touche la surface de la finition du mur.

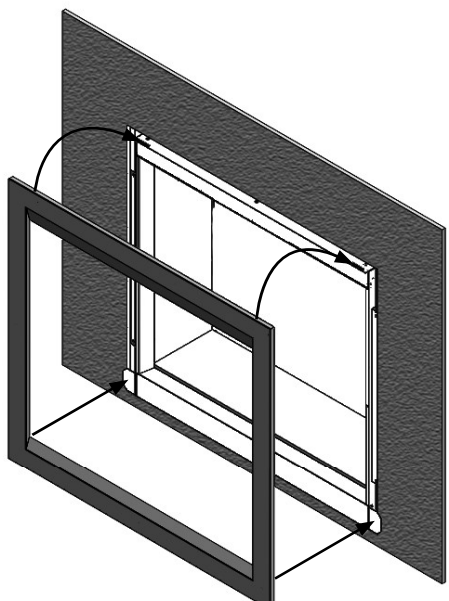


Supports de montage: Si vous avez installé les supports de montage, serrez leurs vis de l'intérieur du foyer, puis réinstallez les parois latérales intérieures du foyer.



5. Continuez l'installation selon les indications du guide fourni avec le foyer.

Pièces

	Description	Pièce n°
1	Devanture Edgemont	4012507
2	Panneau horizontal du bas	4012505
3	Panneau vertical droit	4012509
4	Supports d'aimants (2)	4012500
5	Aimants de céramique (2)	4011031
6	Supports de montage des côtés (2)	4012501
7	Panneau vertical gauche	4012506
8	Panneau horizontal du haut	4012480
9	Crochets	4012724
10	Support d'accrochage	4012502
	Vis (9)	4004560
	Écrous (12)	4000538

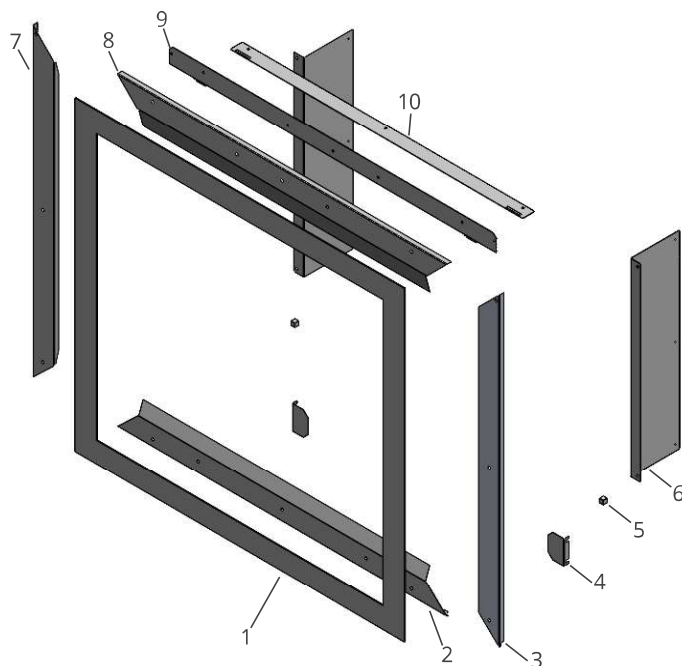

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com