

manufactured by

Charlton
& Jenrick^{LTD}

PE2CSK—Coal Set



Kit Content

The PE2CSK contains the following items:

- Coal fuel bed, with connector cables




Installation

To help set up the coals, turn on the fireplace's fuel bed—see remote control instructions in the fireplace's installation manual.

Unpack the coal fuel bed very carefully—**handle it on the front and back, AVOID handling it by the protruding pieces of coals.**

1. Locate the two connectors on the fuel bed platform; they are covered by a sticker. Remove the stickers.
2. Plug the set cables into the connectors located in the firebed plate, ensuring the connectors are on the correct side to fit into the fuel bed ones. Verify that the coal bed is glowing.

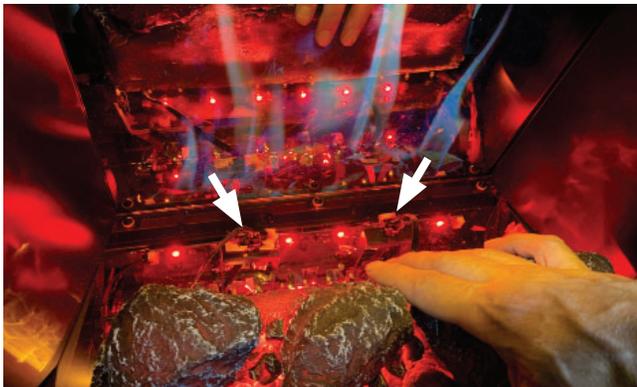

3. Insert the coal bed into the firebox sliding it in front first, ensuring that the front edge of the coal bed locates under the front edge flange of the firebox.



If you see bright light coming through the front edge of the coal bed, relocate it so these spots are under flange at the edge of the firebox.



Incorrect



Correct

manufactured by

Charlton
& Jenrick^{LTD}

PE2CSK—Charbons

valor[®]

Contenu de l'ensemble

Le PE2CSK contient l'article suivant :

- Lit de charbons, avec connecteurs



Installation

Pour faciliter l'installation de l'ensemble, allumez le lit de combustion—voir le mode d'emploi de la télécommande dans le guide d'installation du foyer.

Déballez le lit de charbon très soigneusement—**prenez-le à l'avant et à l'arrière, ÉVITEZ de le tenir par les charbons proéminents du dessus.**

1. Repérez les bornes de connections sur la plaque du lit de combustion. Elles sont couvertes d'une étiquette. Retirez l'étiquette.
2. Branchez les câbles du lit dans les bornes situées sur la plaque du lit de combustion. Assurez-vous de brancher les connecteurs dans la position correcte suivant la forme des ouvertures dans la plaque du lit. Vérifiez si le lit de charbons s'allume de l'intérieur.



3. Insérez le lit de charbons dans le foyer, l'avant d'abord, plaçant son rebord avant sous la bordure noire avant du foyer.



Si vous voyez des espaces plus brillants en bordure du lit, réinsérez-le en calant sa bordure contre le dessous de celle du foyer.



Incorrect



Correct