

INSTALLATION INSTRUCTIONS

Valor® G3 Series




FenderFire Single Door Front 744FVI

Approved for use with Valor models 738/739 ONLY



DANGER

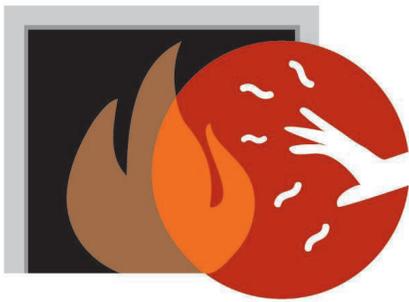

**HOT GLASS WILL
CAUSE BURNS.**

**DO NOT TOUCH GLASS
UNTIL COOLED.**

**NEVER ALLOW CHILDREN
TO TOUCH GLASS.**

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.

Note: This kit must be installed or serviced by a qualified installer, service agency or gas supplier. These instructions are to be used in conjunction with the main installation instructions for the above listed heater model.


A barrier designed to reduce the risk of burns from the hot viewing glass is provided with this appliance and must be installed for the protection of children and other at-risk individuals.

The 744FVI FenderFire Single Door Front is designed to be used along with an outer surround trim (supplied separately).

The Single Door Front fits within the outer surround trim and clips onto the standard mounting brackets supplied with the 738/739 heaters.


The Single Door Front is compatible with all outer surround trims and cast iron surrounds available for use with the 738/739 heaters.

For the **double door version** of the FenderFire front, refer to the 743FVI FenderFire install instructions.

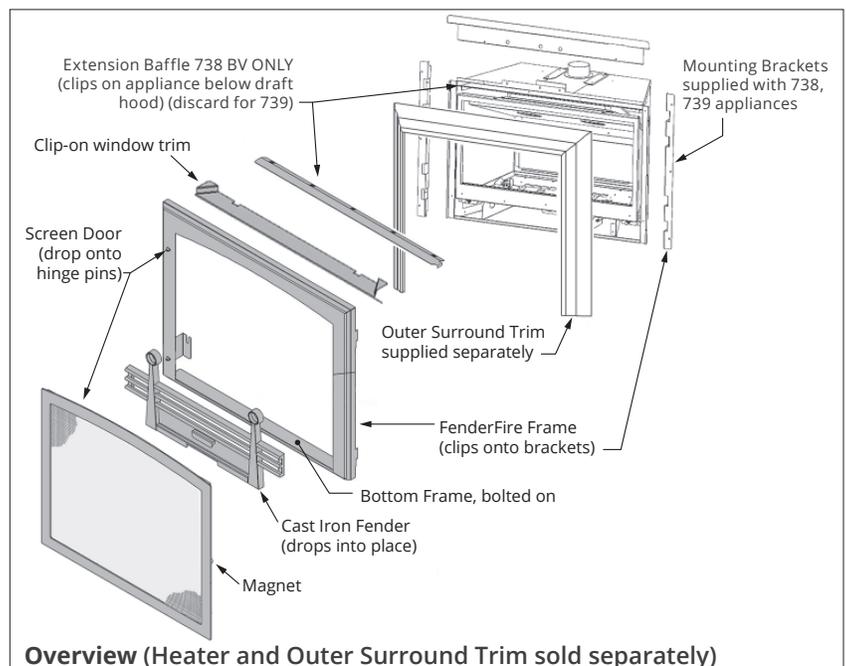


738/739 Mantel Clearances

Mantel width "A"	1"	2"	4"	6"	8"	10"	12"	14"
Mantel height "B"	28"	29 3/8"	32"	33 1/2"	35"	36"	36 1/2"	38"

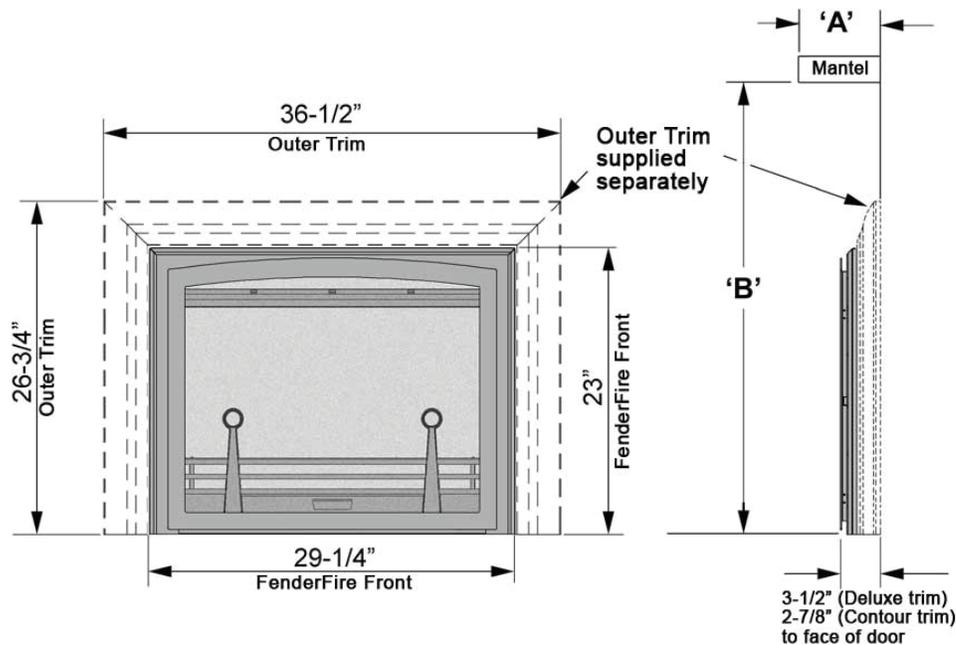


Installation

1. Fasten the outer surround trim and brackets to the 738/739 heaters. Screw the mounting brackets supplied with the heater to the back side of the outer surround. Fasten the assembly to the heater as per instructions supplied with the heater.
2. **For 738 B-Vent Heaters.** Clip the extension baffle onto the sheet metal edge directly below the draft hood of the unit to extend the sheet metal forward to the back of the screen mesh when the doors are installed.
IMPORTANT: Ensure the baffle is installed as shown, with the tabs pointing down.
3. Hook the clip-on window trim to the window frame mounted to the heater by placing it over the window frame and dropping the two tabs into the slots behind the rivets at the top of the window frame.

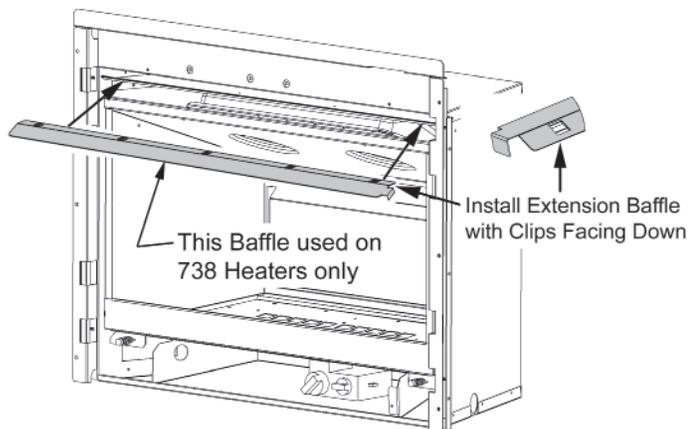

- Clip the FenderFire frame onto the brackets of the heater within the outer surround. If the clips securing the FenderFire frame do not fully engage in the bracket, it may be due to the bottom piece of the frame getting hung up on a high spot on the hearth. If this is the case, loosen the nuts of the bottom piece of the frame and raise it to the appropriate height.

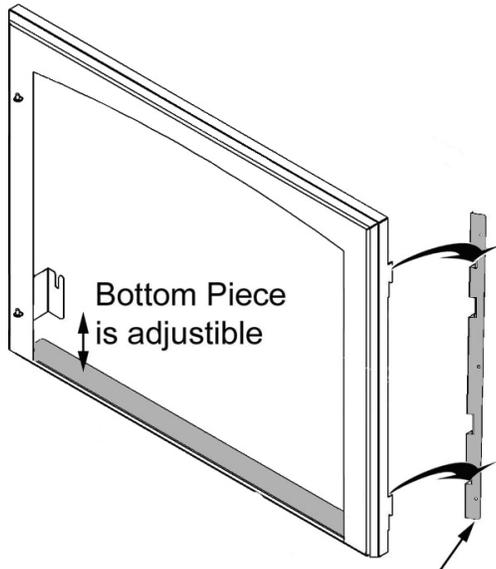

Brackets supplied with 738/9 heater

- Loosen the bolts on the back of the cast iron fender and drop the fender into place within the slotted holes of its support at the base of the door frame. Hang the cast iron ashpan on the hooks within the fender.
- Drop the door on the hinge pins.


Cleaning

The surround and the screened doors can be cleaned with a soft brush.

To clean the fireplace glass window, refer to the owner's manual supplied with the appliance.

Repair Parts List

1	Extension Baffle	4000622PH
2	Clip-on Window Trim	4002394BY
3	Lower Support	4000631AZ
4	Hinge Bracket	4000593
5	Screen Door Assembly	4000563VI
6	Cast Fret	4000625VI

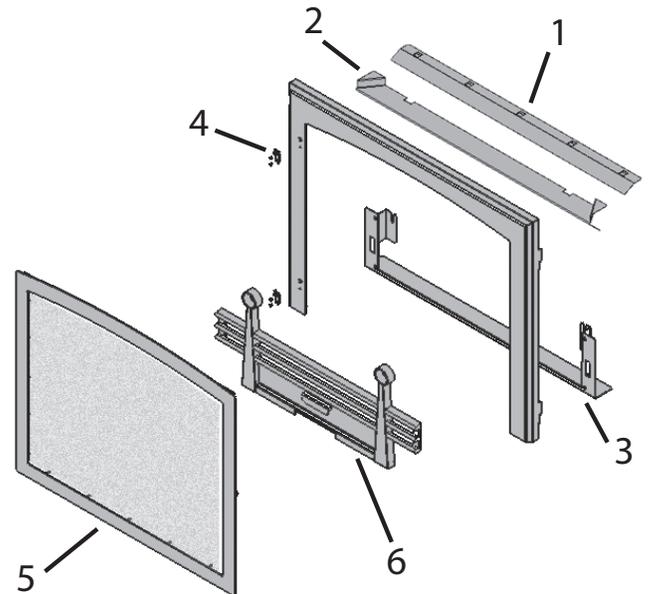

⚠ WARNING

DO NOT TOUCH THE DOORS OR FIREPLACE WHILE THEY ARE HOT! Let the fireplace cool first before cleaning it.

FOR SAFETY PURPOSE, ensure the screen doors are closed after maintenance before operating the fireplace.

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication.

Designed and Manufactured by / for
Miles Industries Ltd.

190 - 2255 Dollarton Highway, North Vancouver, B.C., CANADA V7H 3B1

Tel. 604-984-3496 Fax 604-984-0246

www.valorfireplaces.com

valor Série G3



Porte simple FenderFire 744FVI

Approuvée pour usage exclusif avec les foyers Valor 738/739



DANGER

INSTALLATEUR : Laissez cette notice avec l'appareil.

CONSOMMATEUR : Conservez cette notice pour consultation ultérieure.



VITRE CHAUDE - RISQUE DE BRÛLURES.

NE TOUCHEZ PAS UNE VITRE NON REFROIDIE.

NE LAISSEZ JAMAIS UN ENFANT TOUCHER LA VITRE.

Note : Ce kit doit être installé ou réparé par un installateur qualifié, une agence de service certifiée ou un fournisseur de gaz. Ces instructions doivent être utilisées conjointement avec les instructions d'installation du modèle de foyer Valor indiqué ci-dessus.


L'écran pare-étincelles fourni avec ce foyer réduit le risque de brûlure en cas de contact accidentel avec la vitre chaude et doit être installé pour la protection des enfants et des personnes à risques.

La porte simple FenderFire 744FVI est conçue pour être installée avec une bordure extérieure (vendue séparément).

La porte s'attache à l'intérieur de la bordure et elle s'accroche aux supports de montage standards fournis avec les foyers 738 et 739.

La porte simple FenderFire est compatible avec toutes les bordures offertes pour les foyers 738 et 739.


Pour l'installation des **portes doubles** FenderFire, consultez les instructions fournies avec le kit 743FVI.

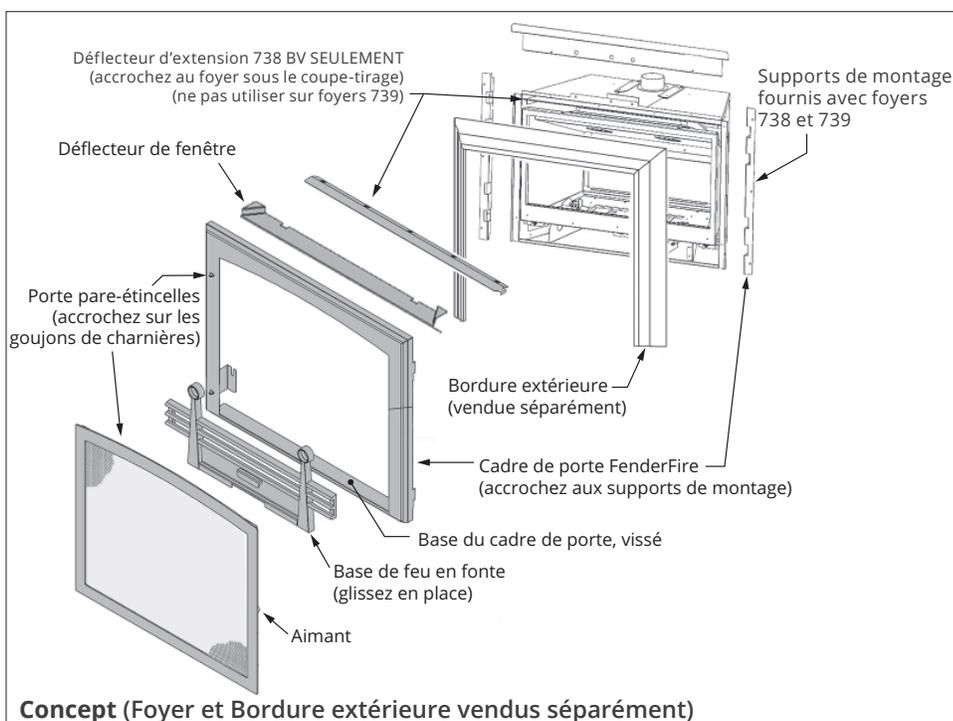

Dégagements—Manteau de cheminée


738/739

Profondeur "A"	1"	2"	4"	6"	8"	10"	12"	14"
Hauteur "B"	28"	29 3/8"	32"	33 1/2"	35"	36"	36 1/2"	38"

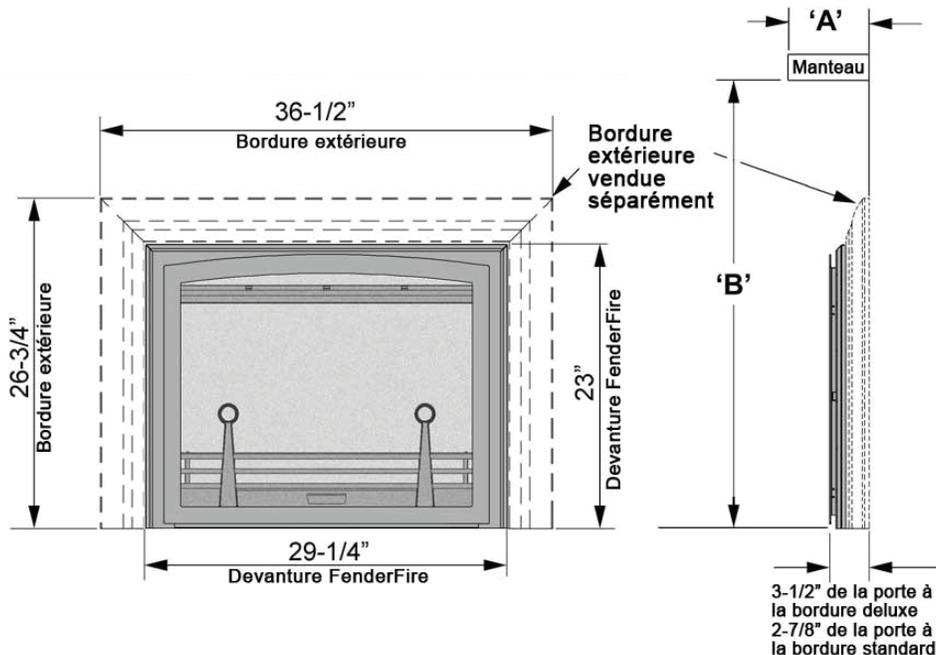


Installation

- Fixez les supports de montage fournis avec le foyer à la bordure extérieure et fixez l'assemblage au foyer selon les instructions fournies avec l'appareil.
- Foyer 738 à évacuation de type B.** Accrochez le déflecteur d'extension à la bordure de métal directement sous le coupe-tirage de l'appareil afin de permettre l'extension de la bordure vers l'avant; le déflecteur touchera l'arrière du grillage de la porte lorsqu'elle sera installée.
IMPORTANT : Assurez-vous que le déflecteur est installé de telle façon à ce que les languettes soient orientées vers le bas.
- Accrochez le déflecteur de fenêtre au cadre de fenêtre déjà installé au foyer en insérant les languettes du déflecteur dans les fentes sur le dessus du cadre, à l'arrière des rivets.

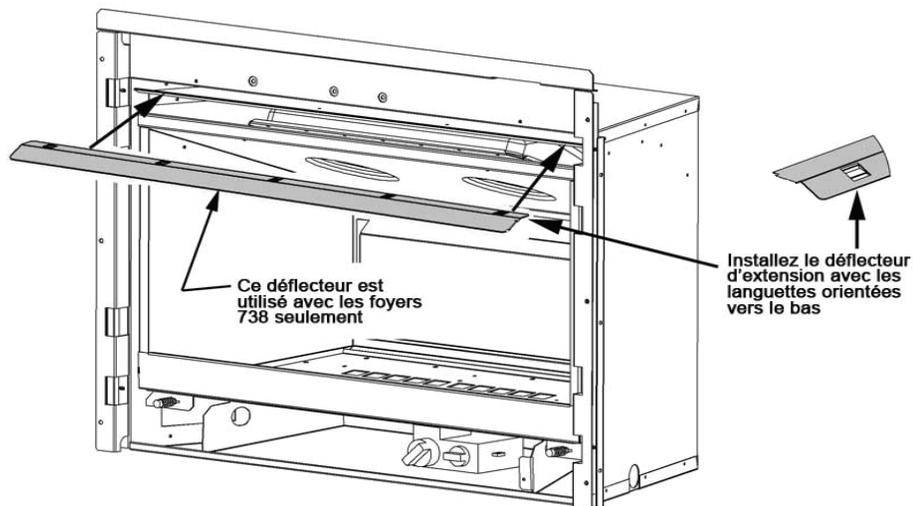

4. Accrochez le cadre de porte FenderFire sur ses supports à l'intérieur de la bordure extérieure. Si le cadre ne s'accroche pas bien, il est possible que sa base touche une partie inégale de la base de foyer; dans ce cas, dévissez les écrous à l'arrière du cadre et réglez la hauteur de sa base.

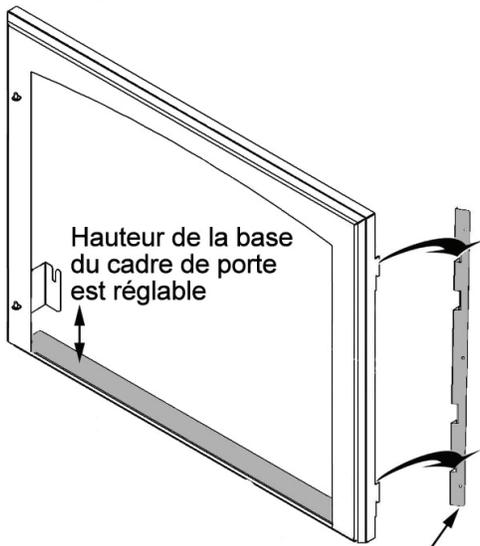

Supports de montage fournis avec les foyers 738/9

5. Dévissez les boulons à l'arrière de la base de feu en fonte et glissez-la en place dans les fentes de ses supports attachés au cadre de porte. Accrochez le garde-cendres sur les crochets de la base de feu.
6. Glissez la porte sur les goujons des charnières.


Entretien

La devanture et les portes grillagées peuvent être nettoyées à l'aide d'une brosse souple.

Pour nettoyer la vitre de la fenêtre, consultez le guide du consommateur fourni avec le foyer.

Liste de pièces

1	Défecteur d'extension	4000622PH
2	Défecteur de fenêtre	4002394BY
3	Base du cadre de porte	4000631AZ
4	Charnière	4000593
5	Porte à grillage	4000563VI
6	Base de fonte	4000625VI

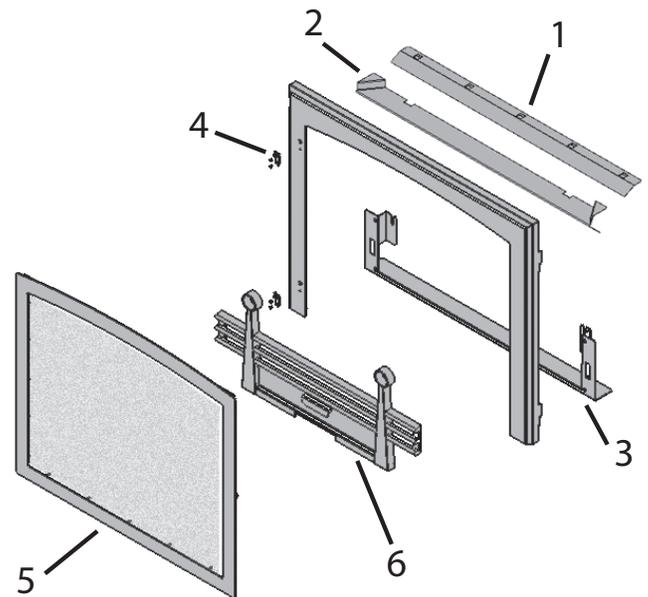

⚠ AVERTISSEMENT

NE TOUCHEZ PAS LES PORTES OU LE FOYER LORSQU'ILS SONT CHAUDS! Laissez-les refroidir avant de les nettoyer.

POUR DES RAISONS DE SÉCURITÉ, assurez-vous que les portes soient fermées avant d'utiliser le foyer.

Parce que nous favorisons une politique de développement continu, certains détails de la présente publication peuvent varier.

Conçue et fabriquée par / pour

Miles Industries Ltd.

190 – 2255 Dollarton Highway, North Vancouver, BC, CANADA V7H 3B1

Tél. 604-984-3496 Téléc. 604-984-0246

www.foyervalor.com